MIRADOR

CANVAS


ASSEMBLY MANUAL

111 S








CONSTRUCTION PLAN






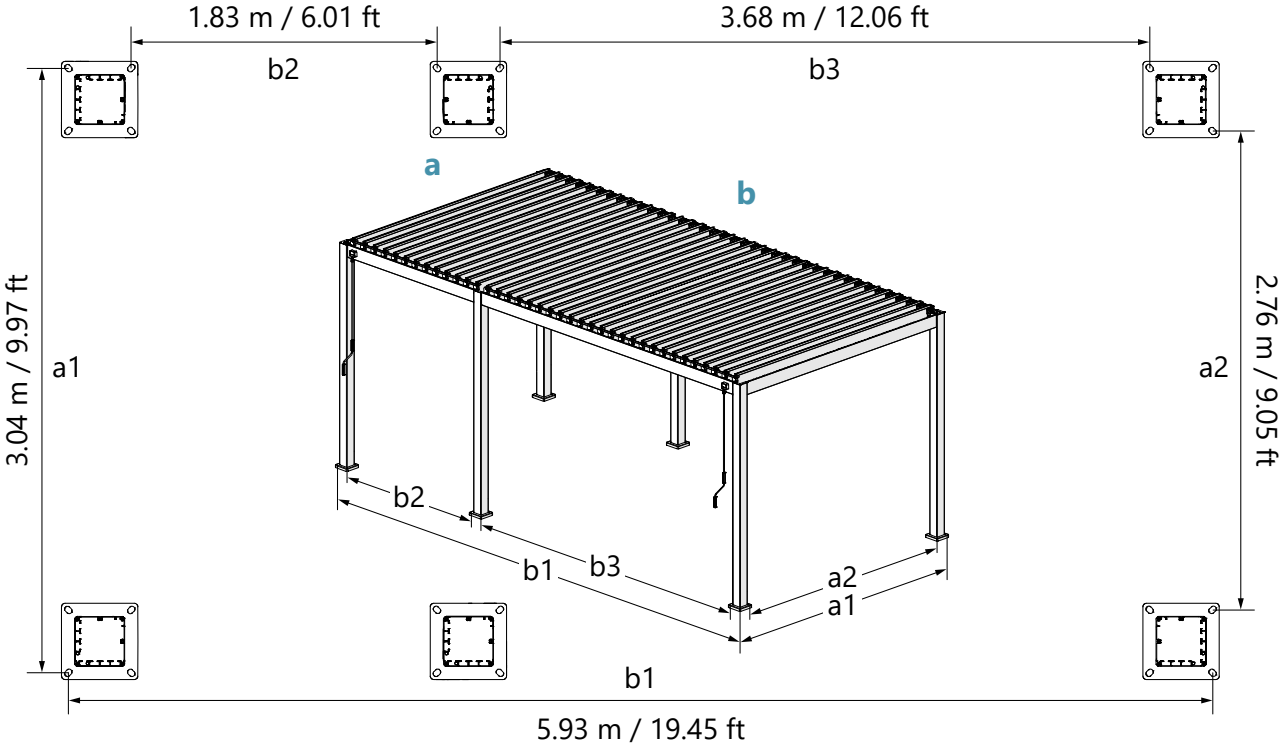


LIST OF PARTS

A	x4	
A1	x2	
B	x1	
B1	x1	
B2	x1	
B3	x1	
B4	x1	
C	x2	
D	x38	
G	x2	
G1	x2	
H	x2	

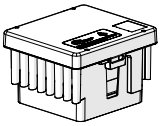


* Extra spare parts included

I	x6		Q	x152+8*	
J	x6		R	x30+2*	
K	x74+3*		S	x76+6*	
L	x2		T1	x4	
M	x76+3*		U2	x4	
N	x3		V	x2	
N1	x2		W	x24	
N2	x1		X	x1	
N3	x2		Y	x2	
O	x36+3*		Z	x1	
P	x152+8*		Z10	x0+10*	

ASSEMBLY


Assembly Video

- Kx77
- Lx2
- Mx79
- Nx3
- N1x2
- N2x1
- N3x2
- Sx82
- T1x4
- U2x4

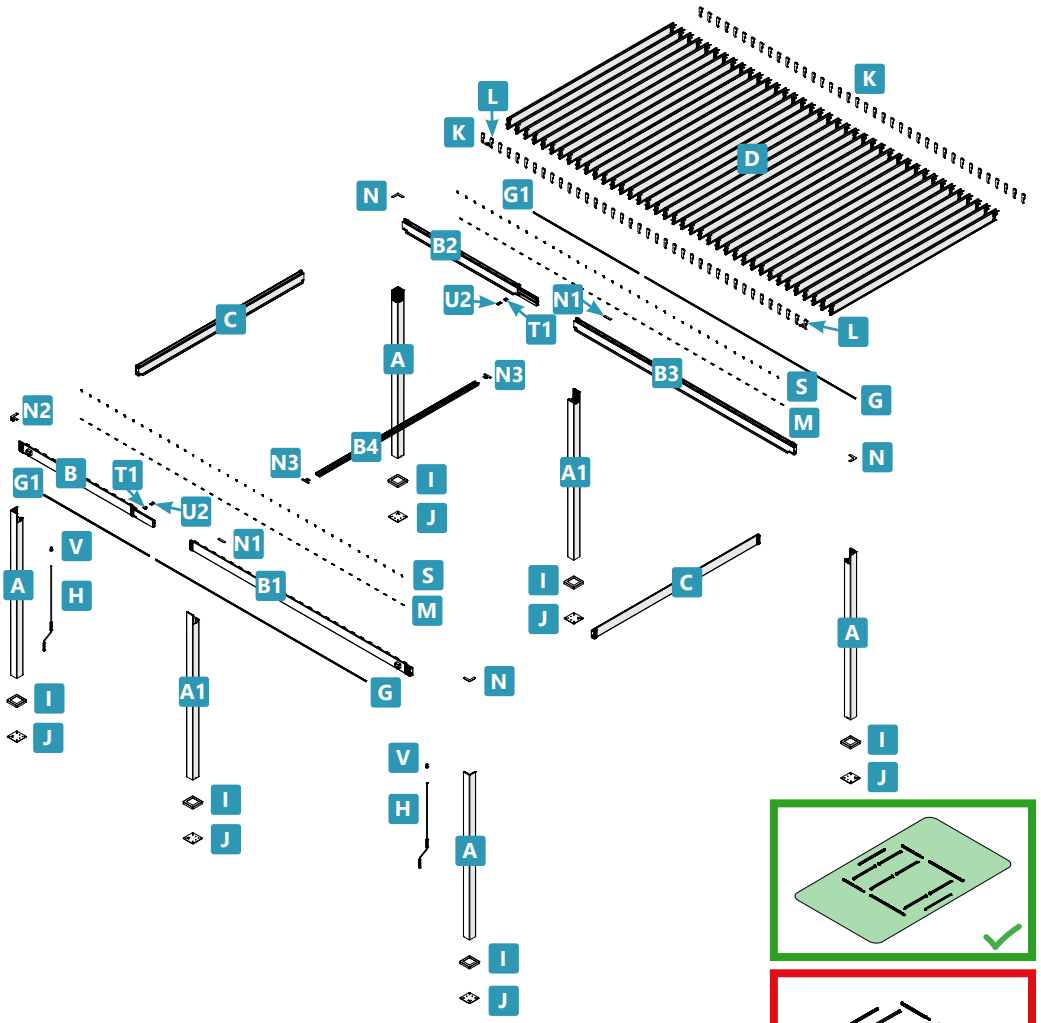


01


A x 4 A1 x2 I x 6 J x 6 O x 36

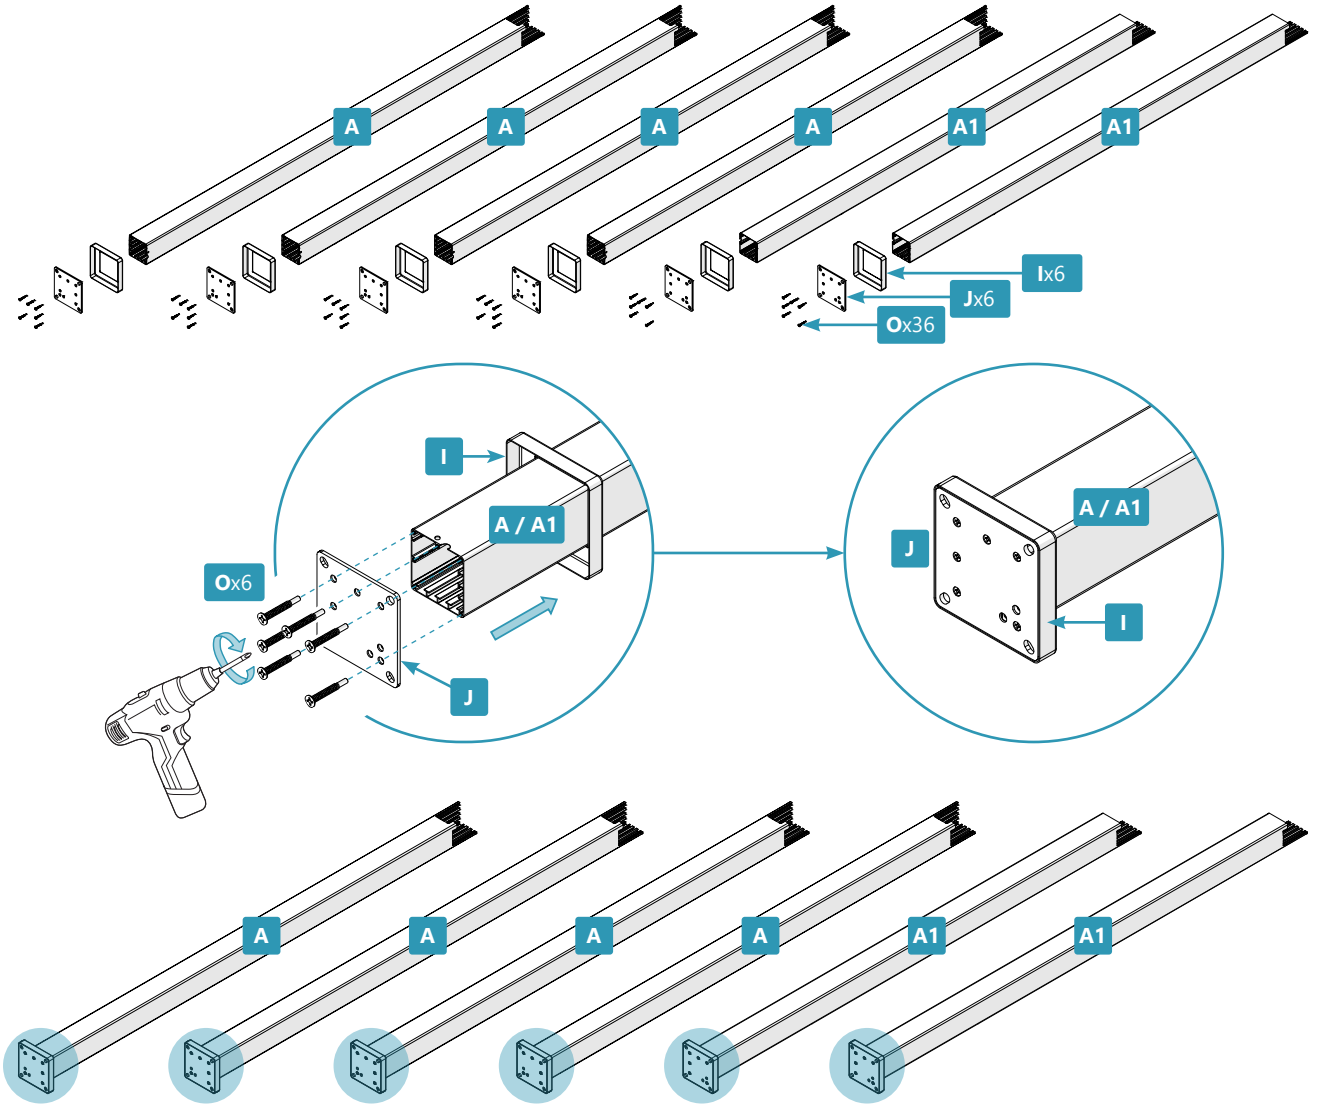


02

B x 1
B2 x 1
B1 x 1
B3 x 1
T1 x 4
U2 x 4

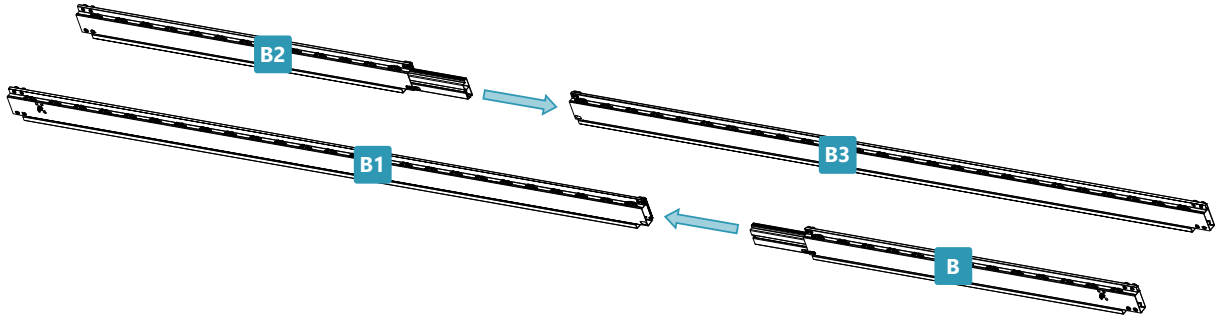

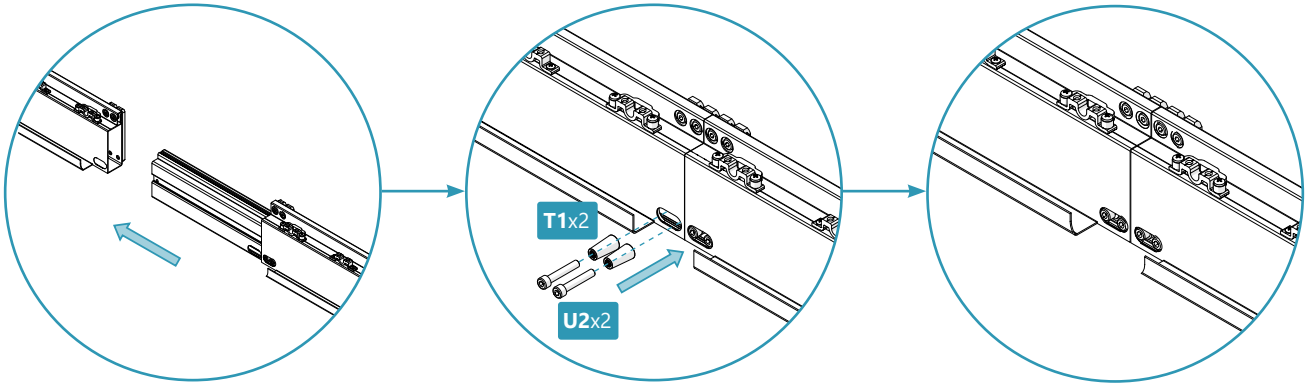


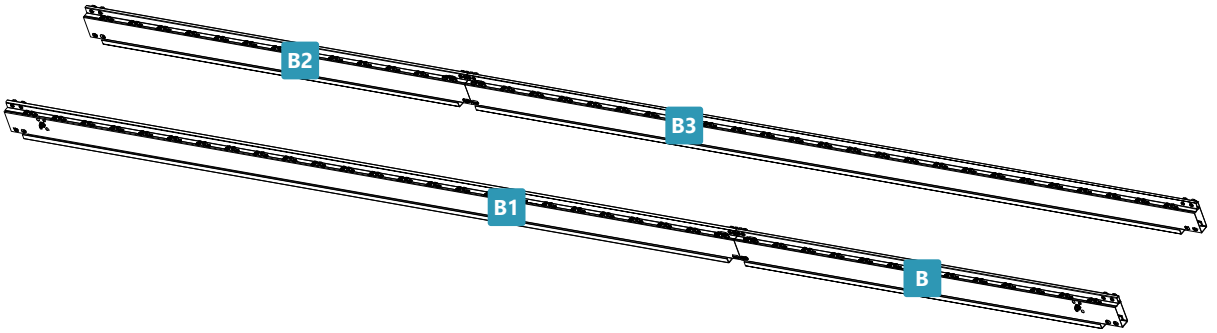


03


C x 2

Y

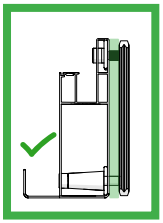


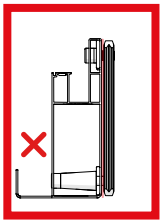

Notice: Turn Y counterclockwise 3 times to loosen the screws, but do not remove them completely.

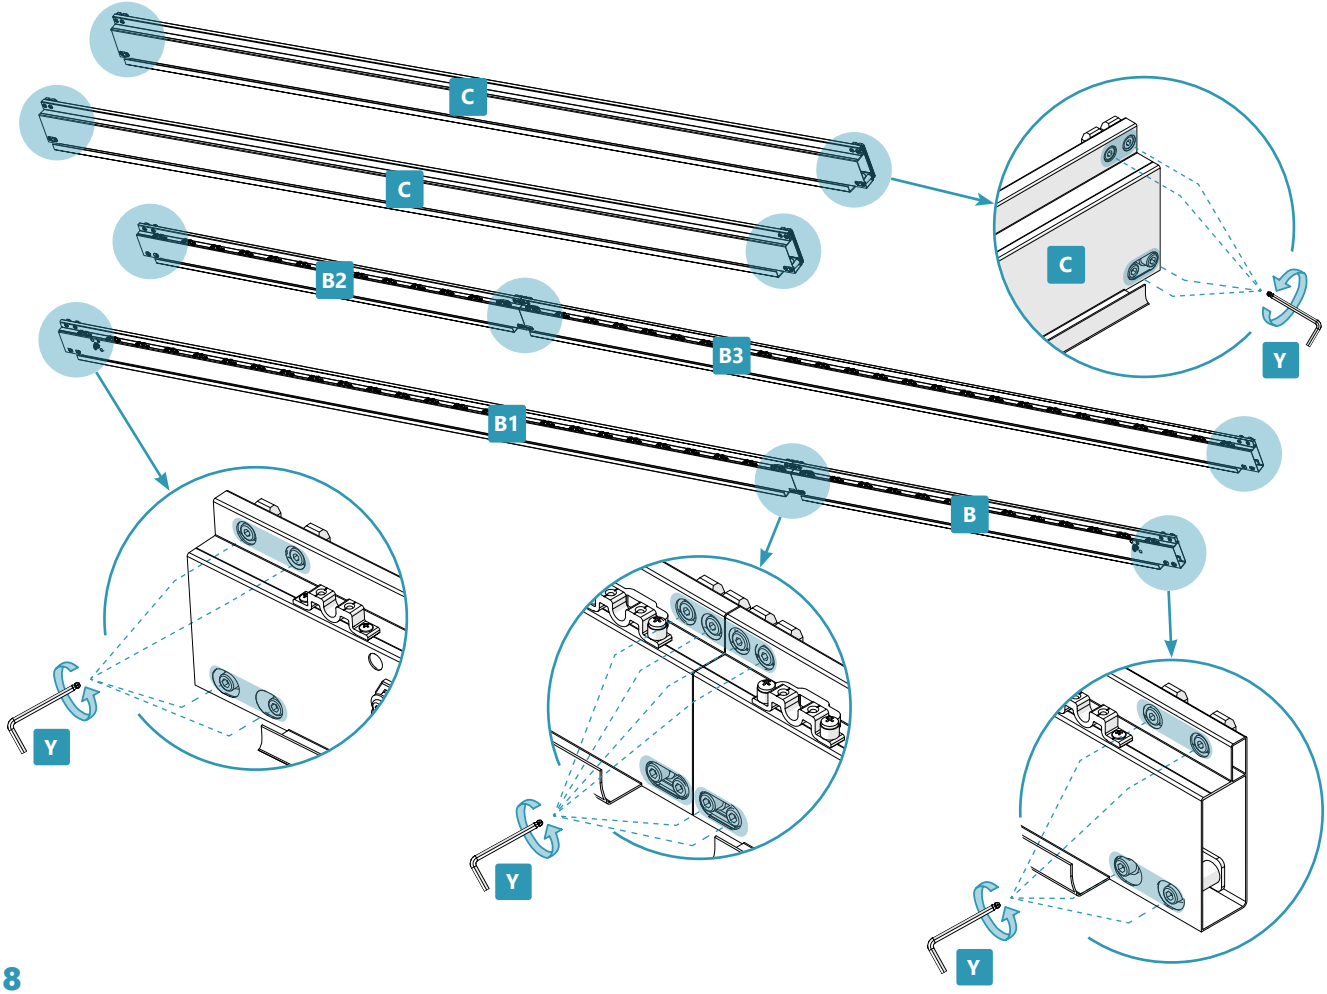


04

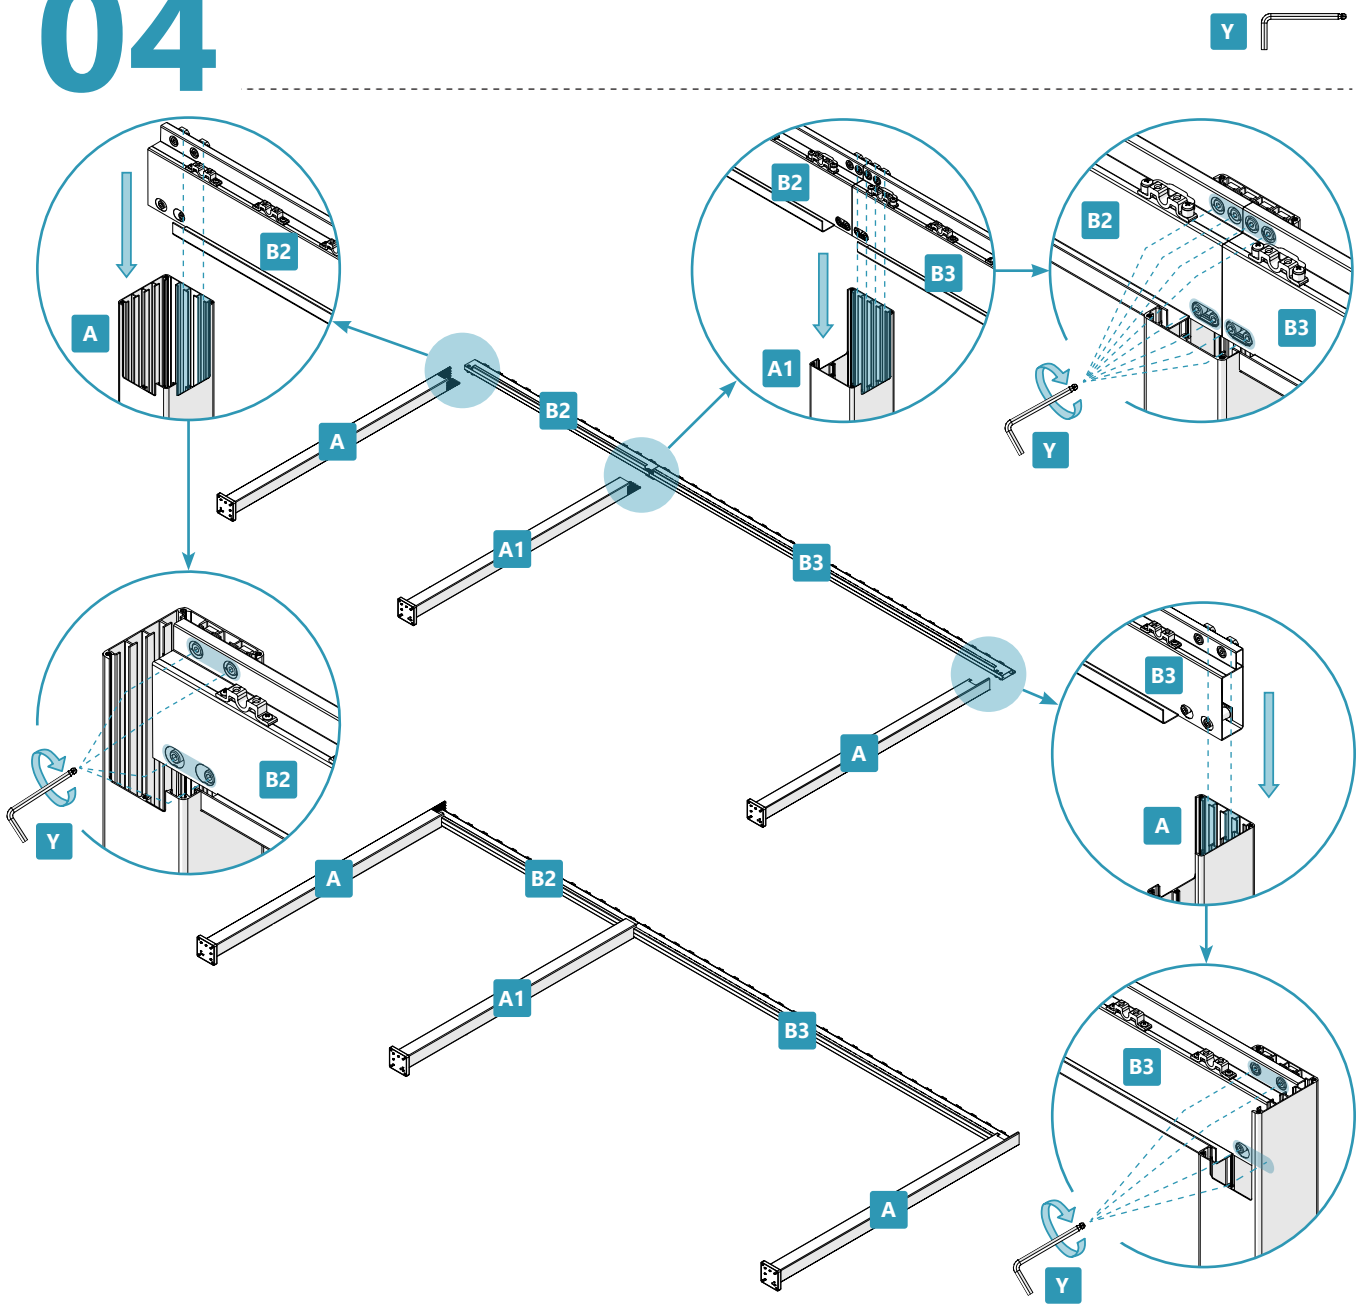


05

04


Y

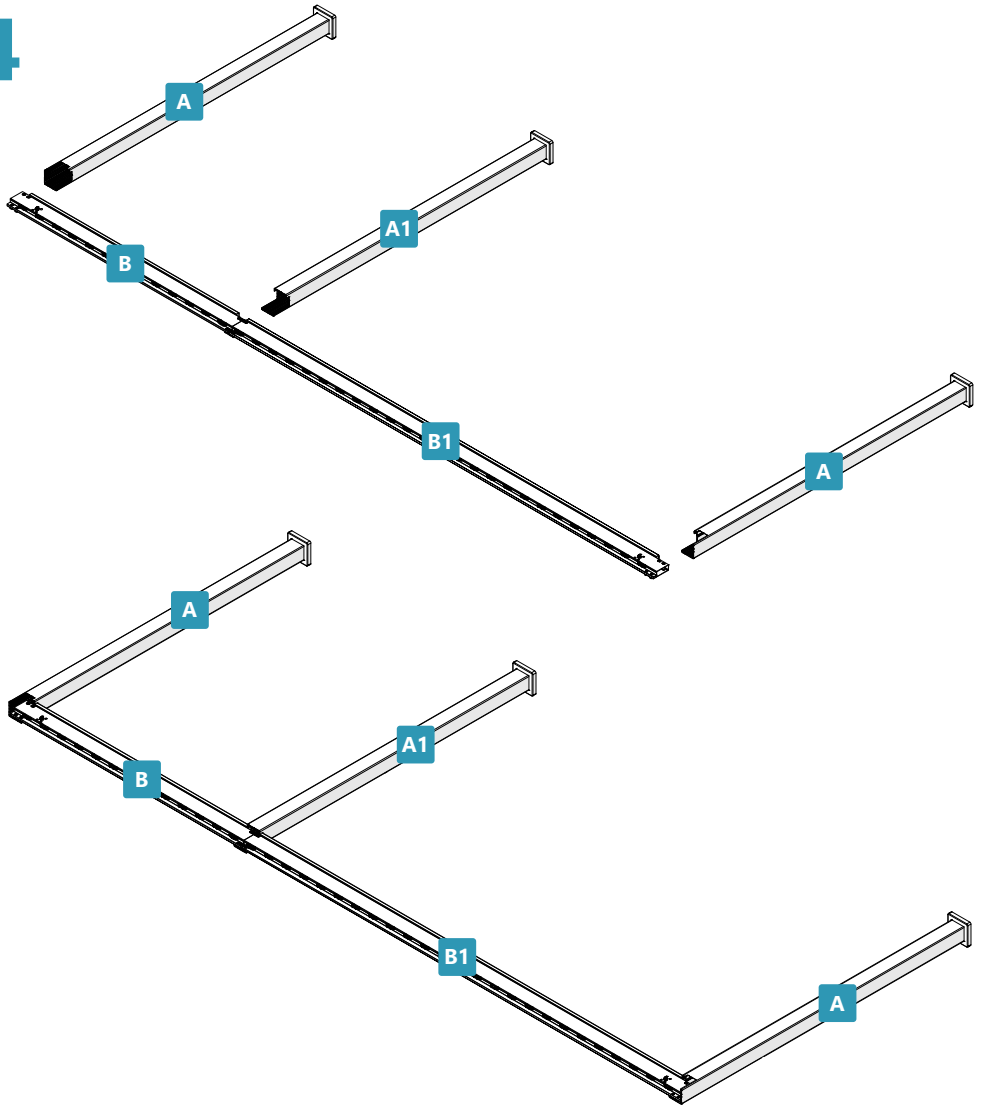

06

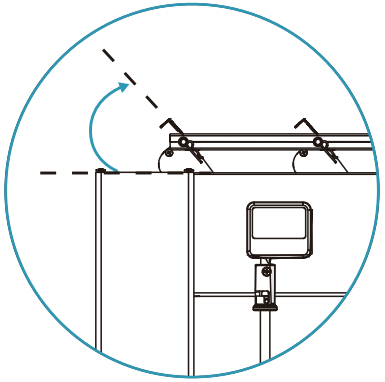


Notice:
When determining the installation direction of the product, please consider the opening direction of the louvers as well as the desired sunshade effect.

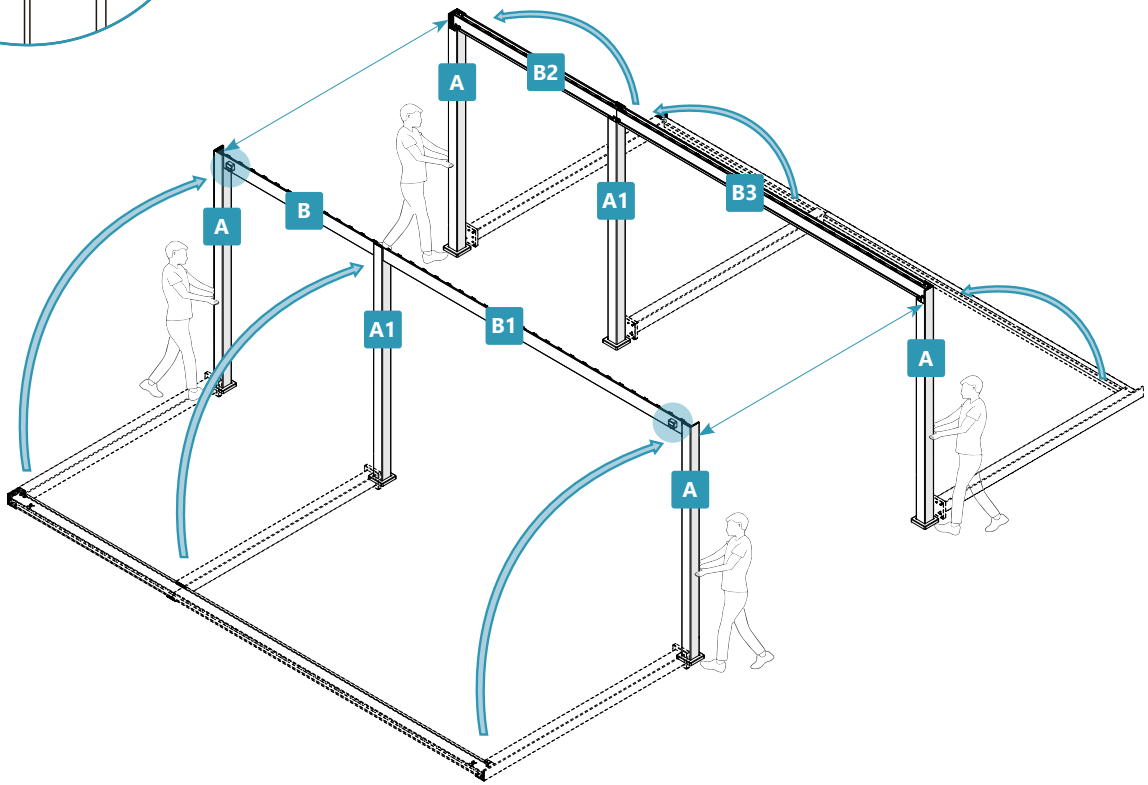

07


C x 2

Y

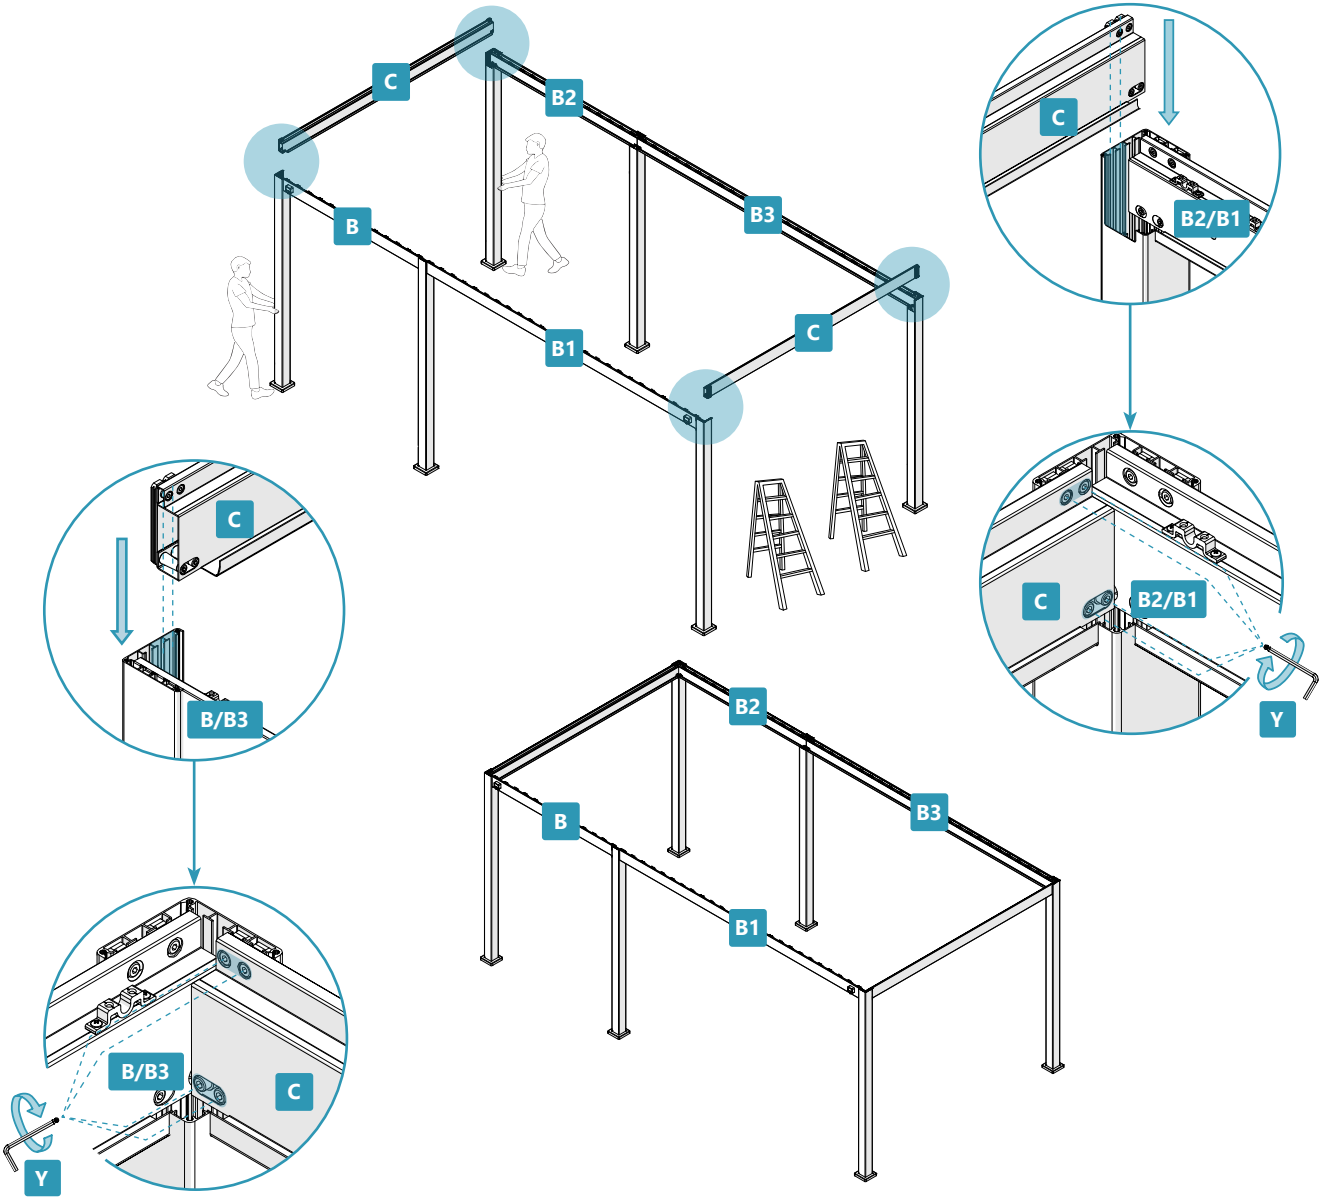


08

V x 2

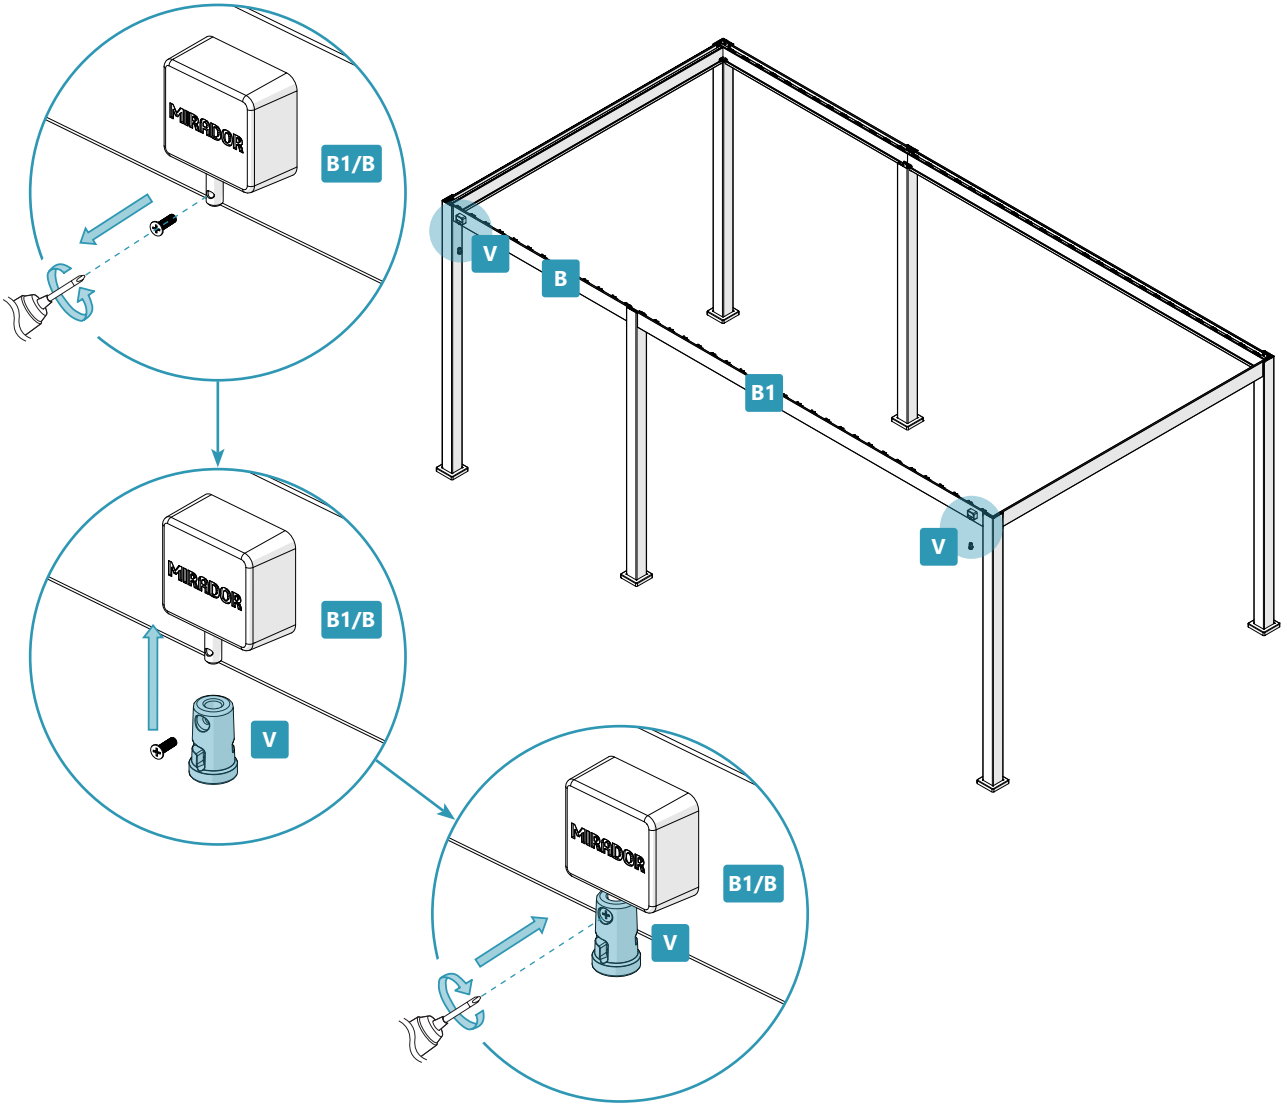

09

H x 2

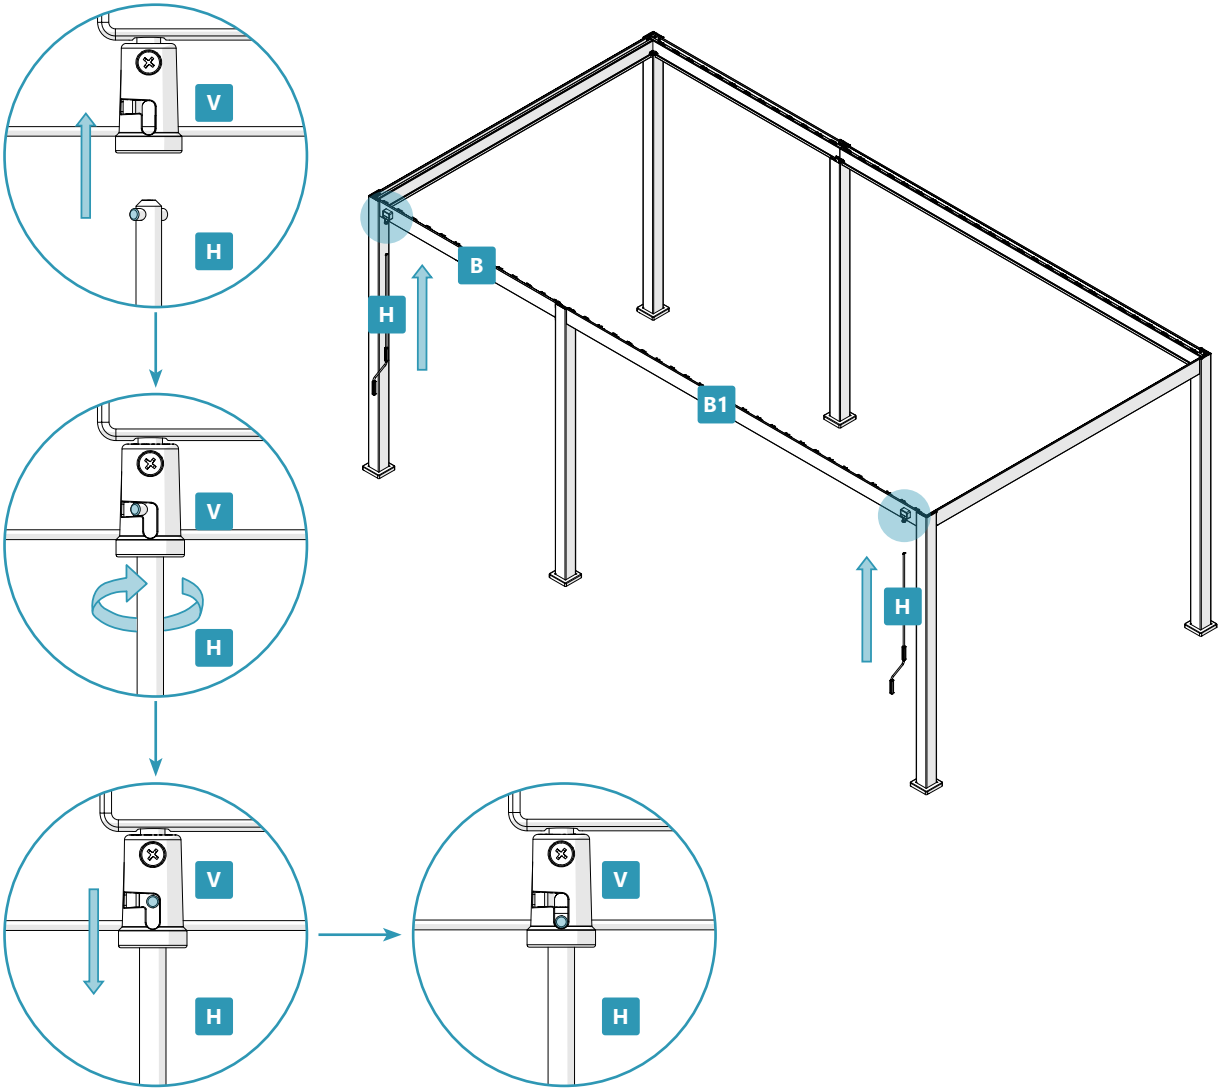


10

B4 x 1


N3 x 2


R x 8

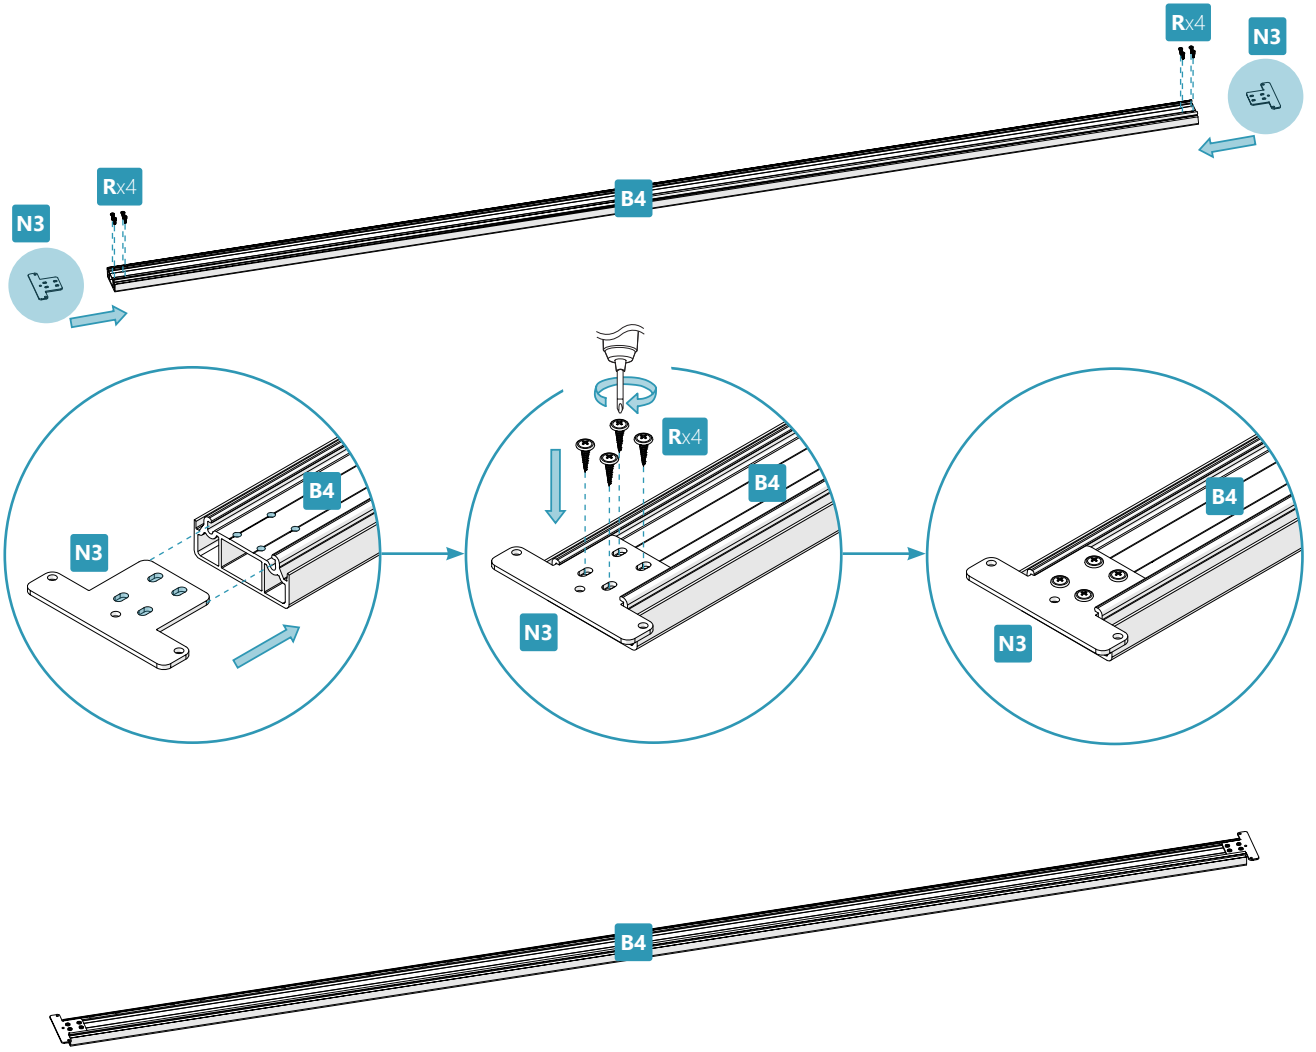

11


R x 6

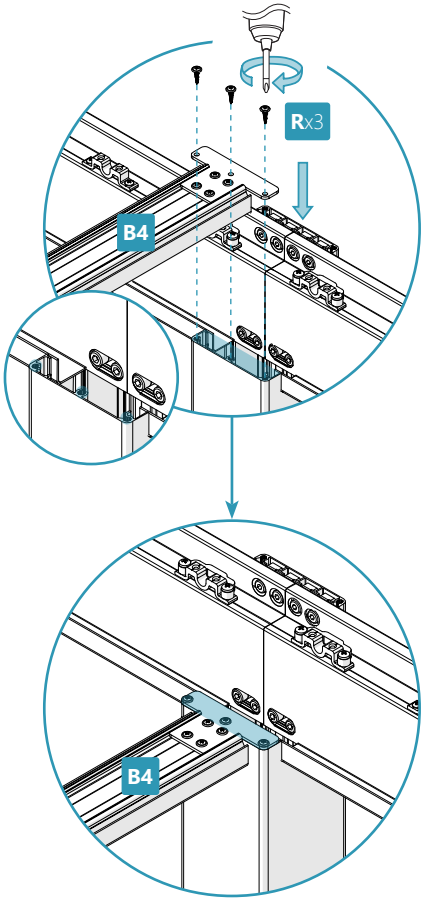

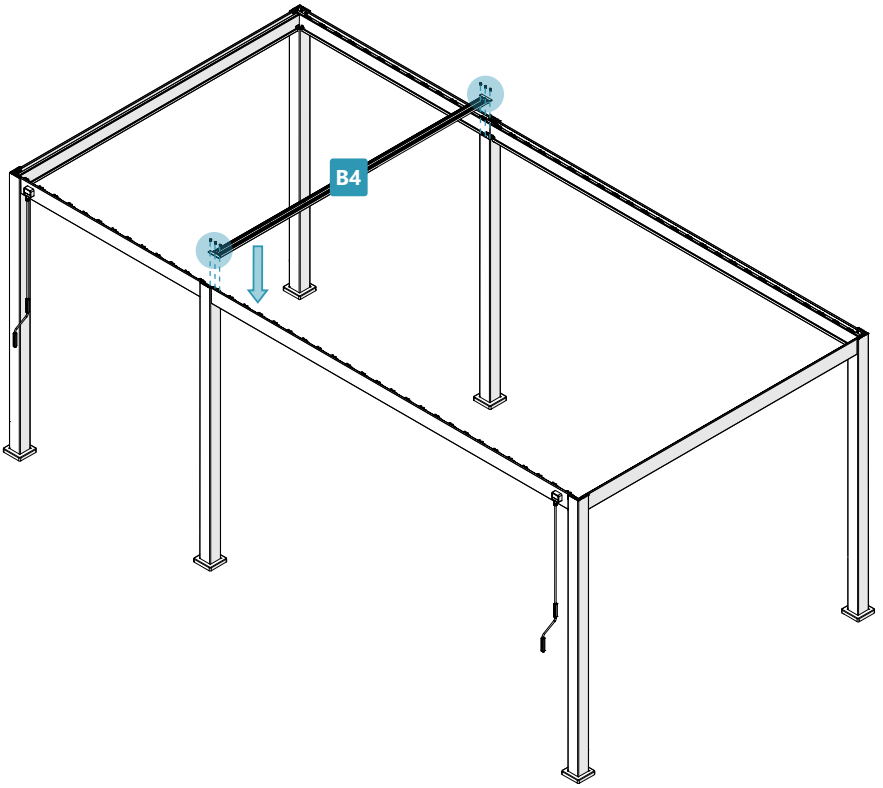


12

D x 2 K x 2 L x 2 Q x 8

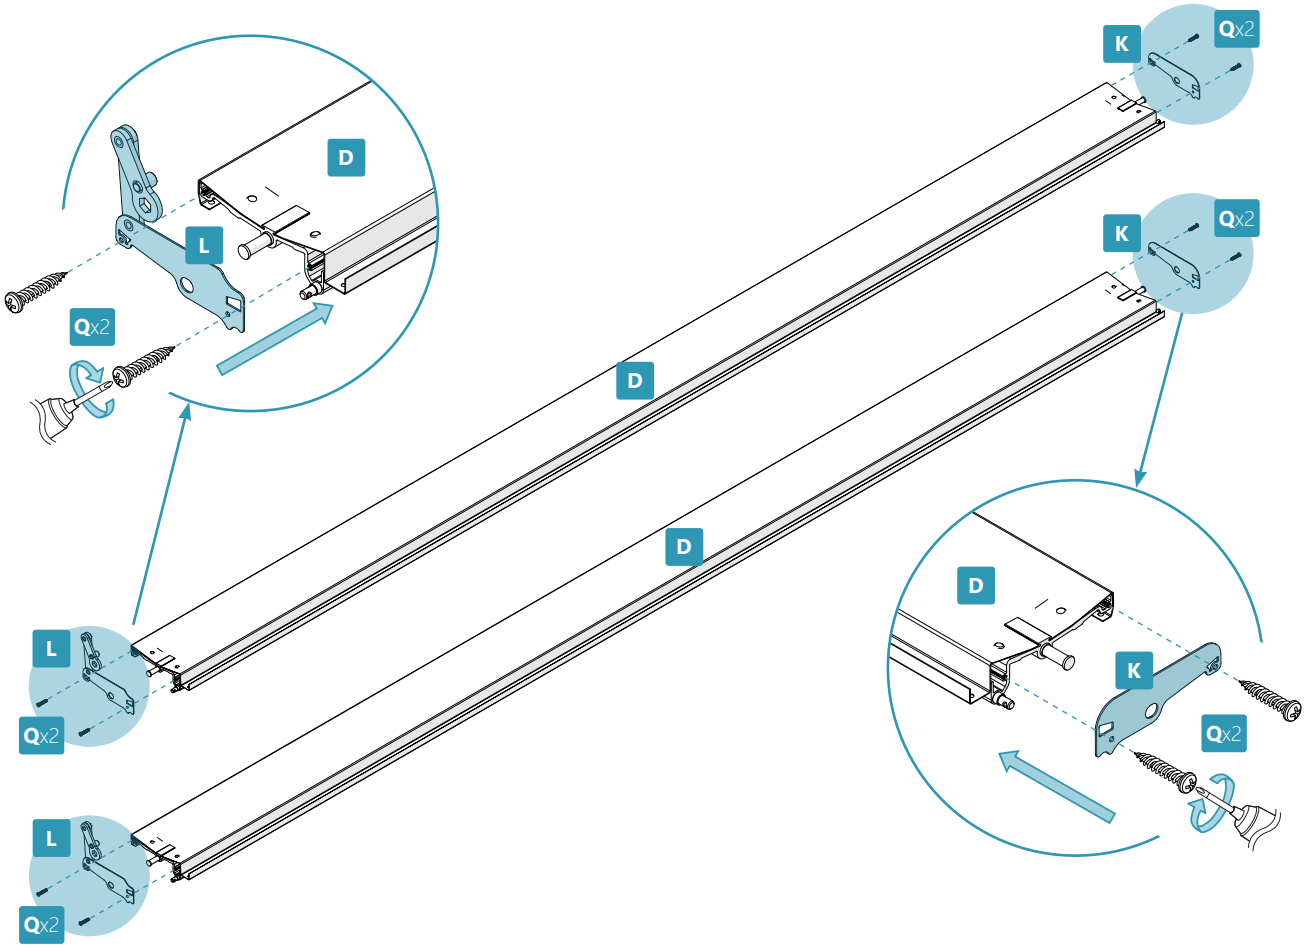


13



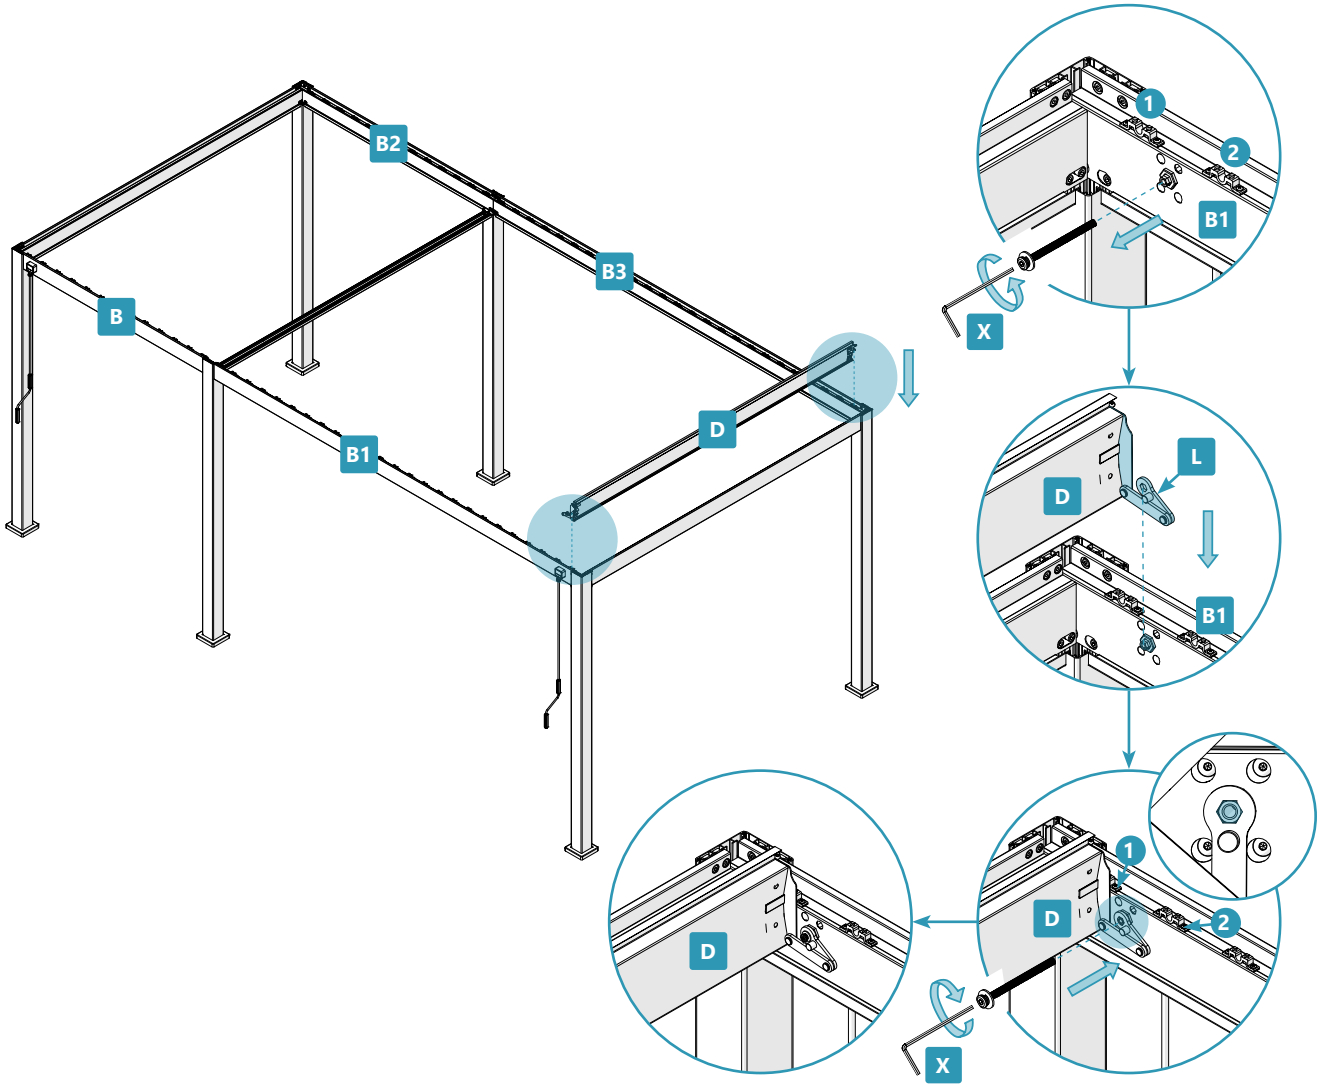


14

M x 2 P x 4

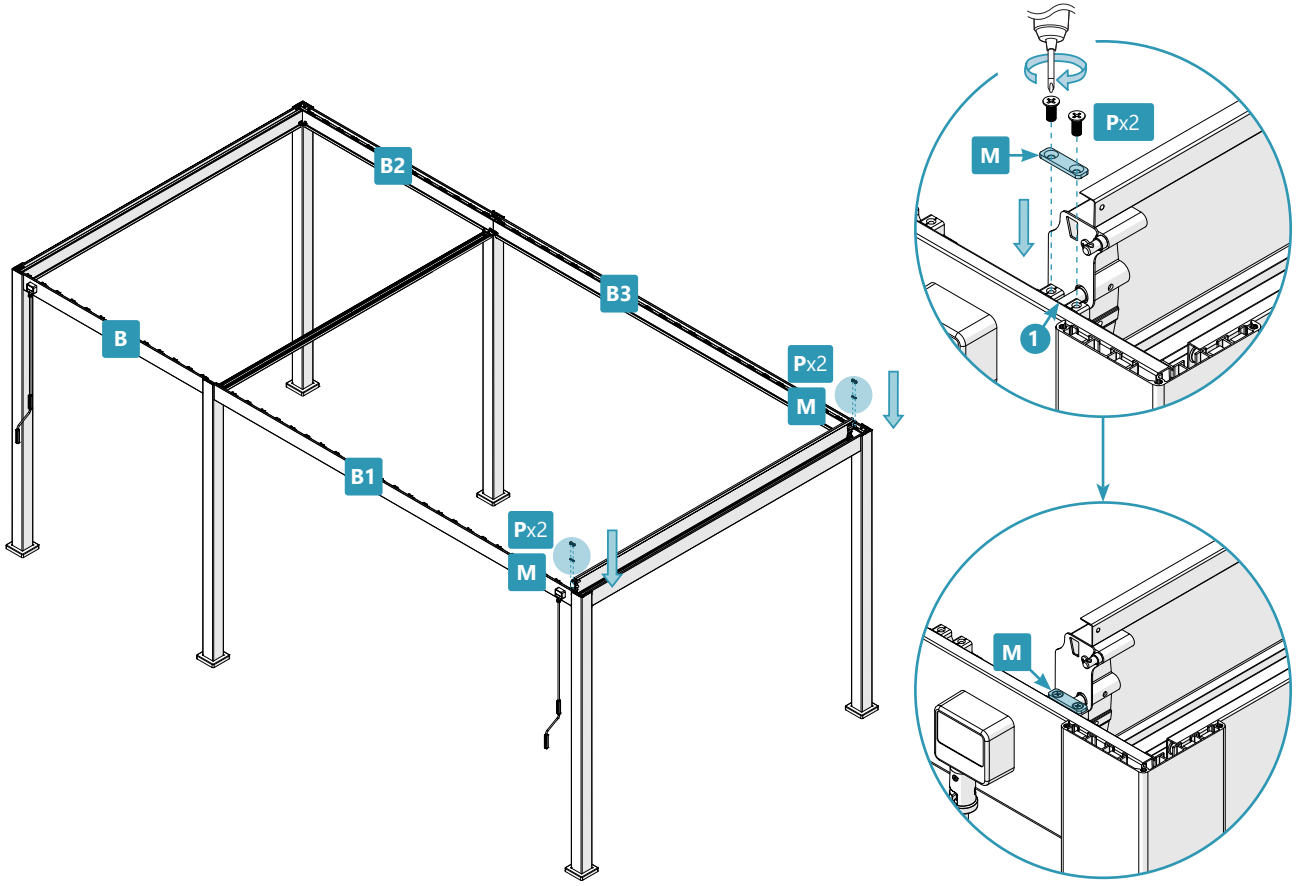


15


X

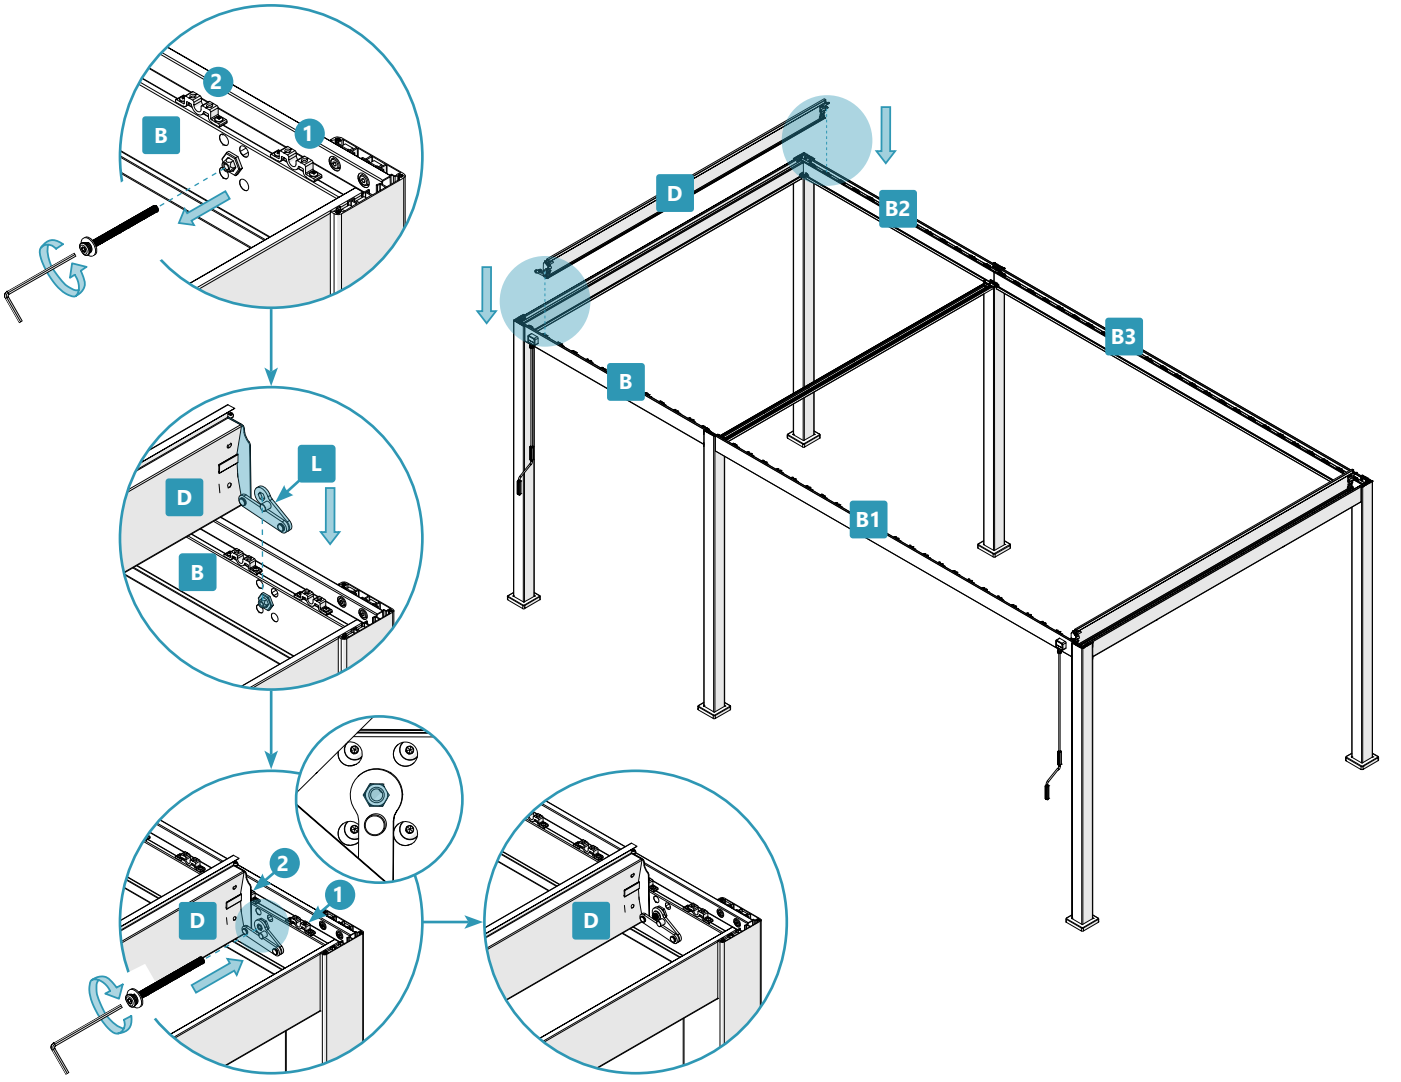


16


M x 2 P x 4

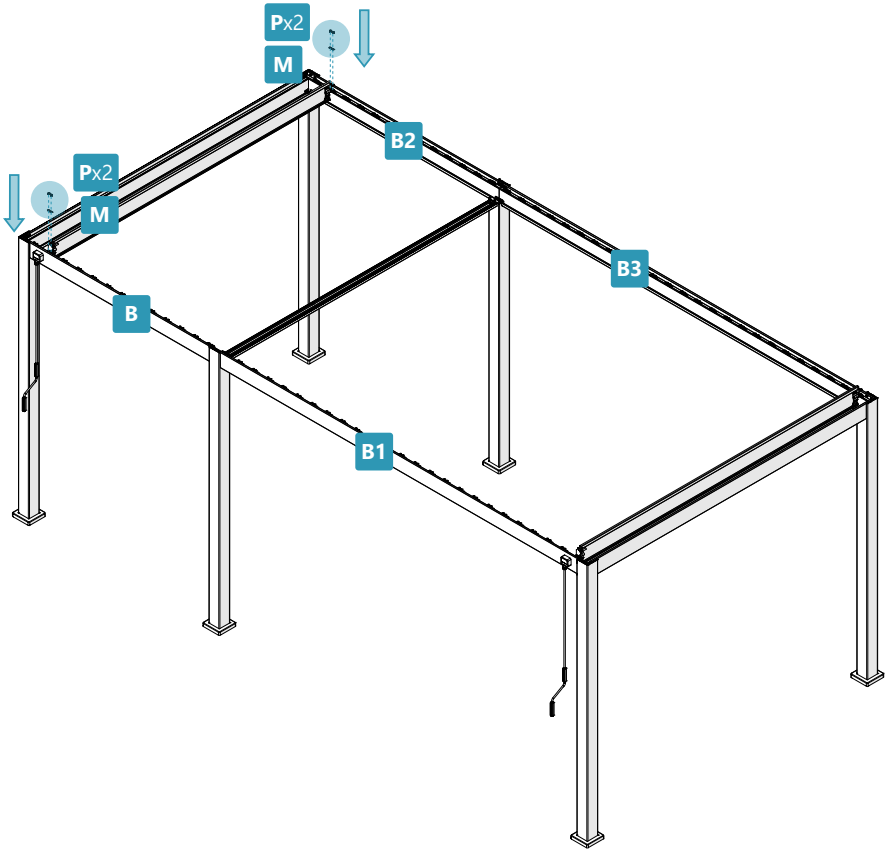

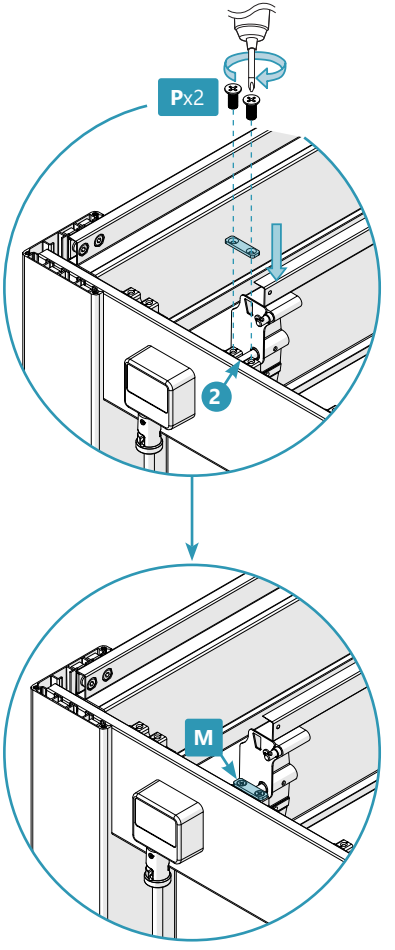

17

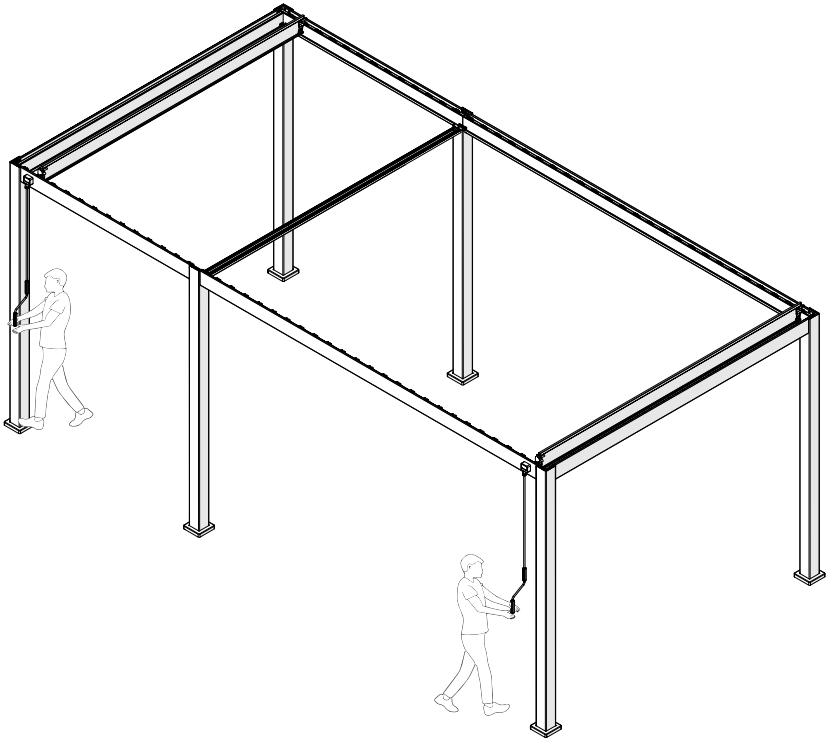

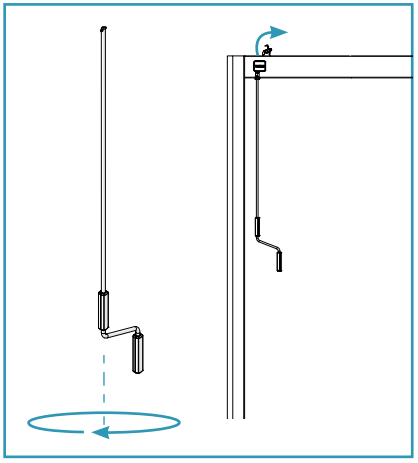


Notice:
Please check whether the driving louver is operating normally and keep it upright.

18


D x 36


Q x 144

K x 72

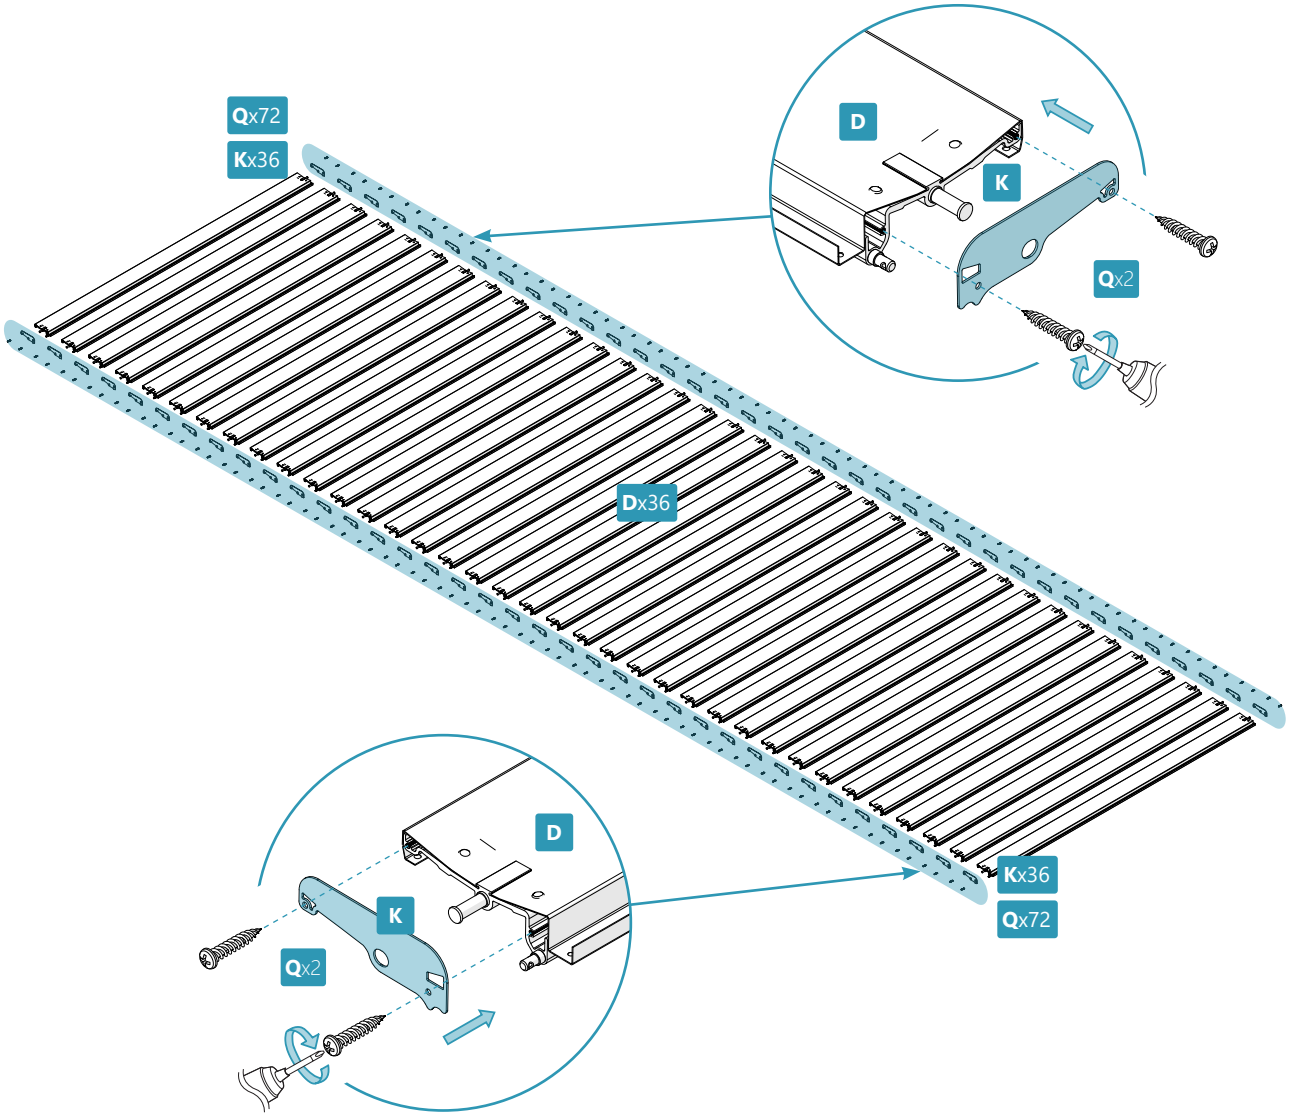


19

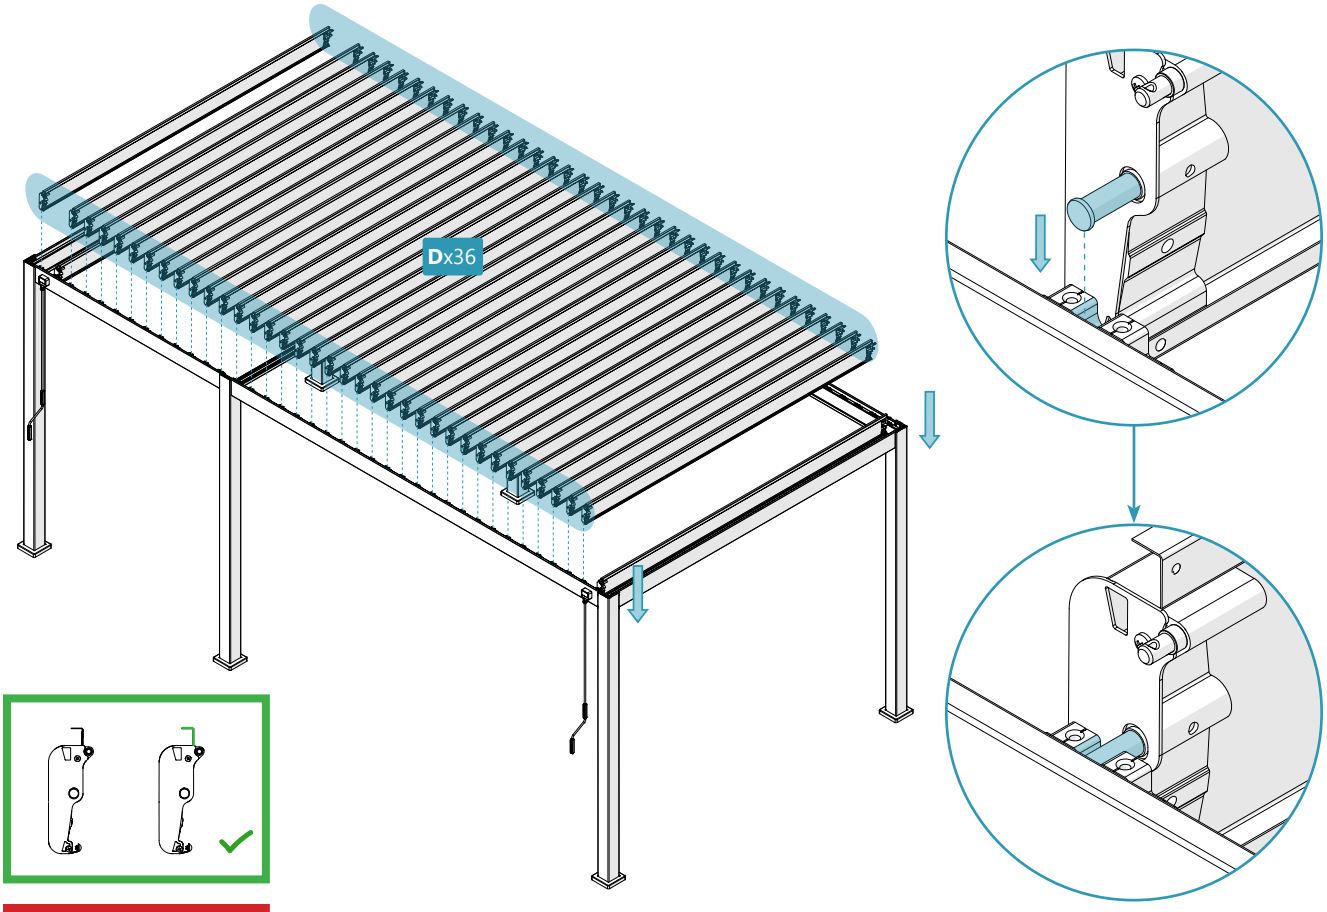

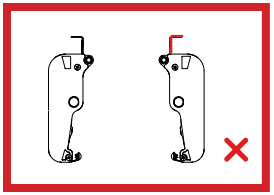


20

M x 72 P x 144

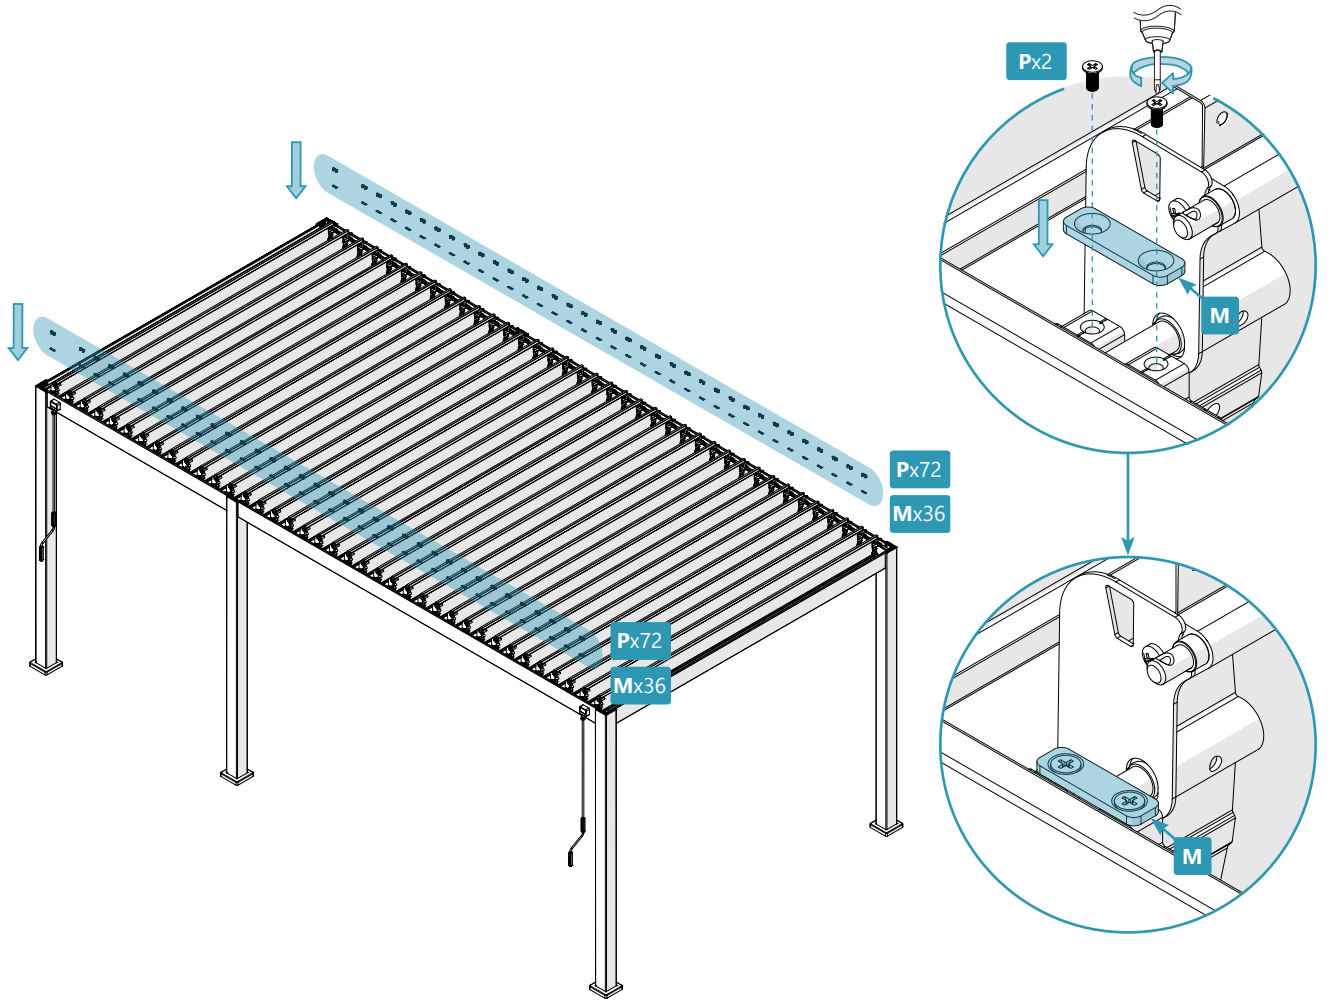


21


G x2

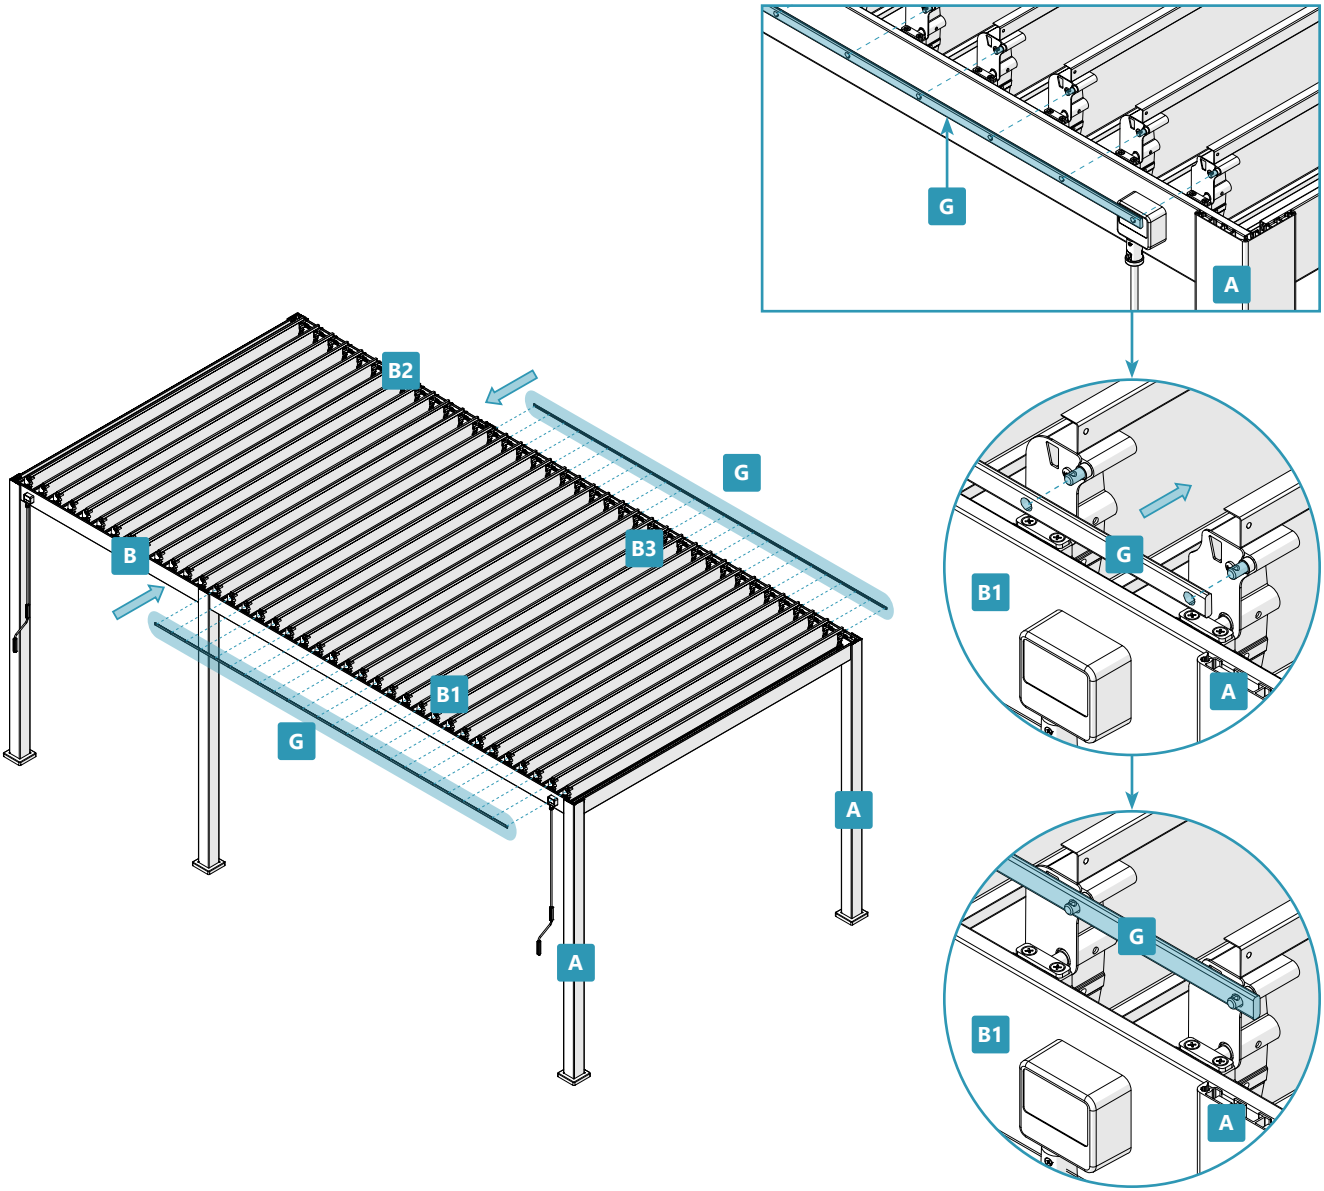



22

G1 x 2

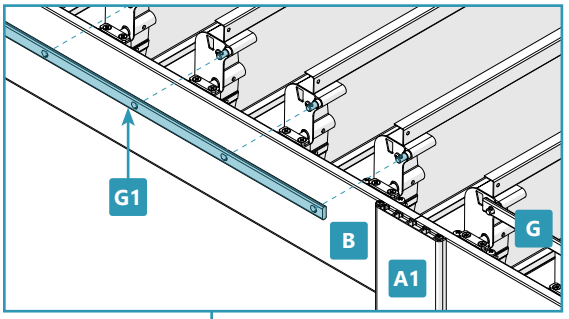

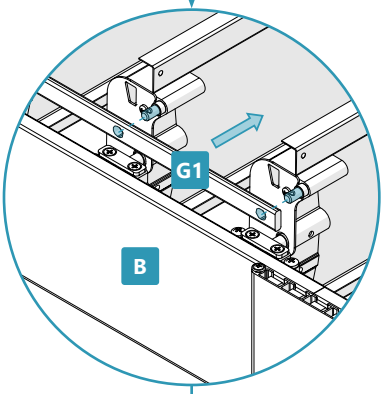


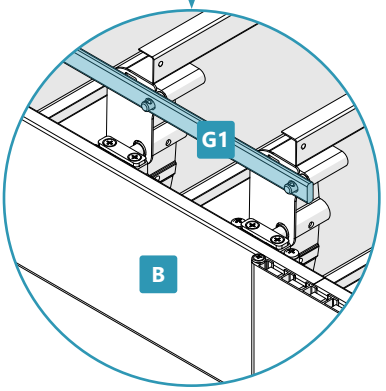

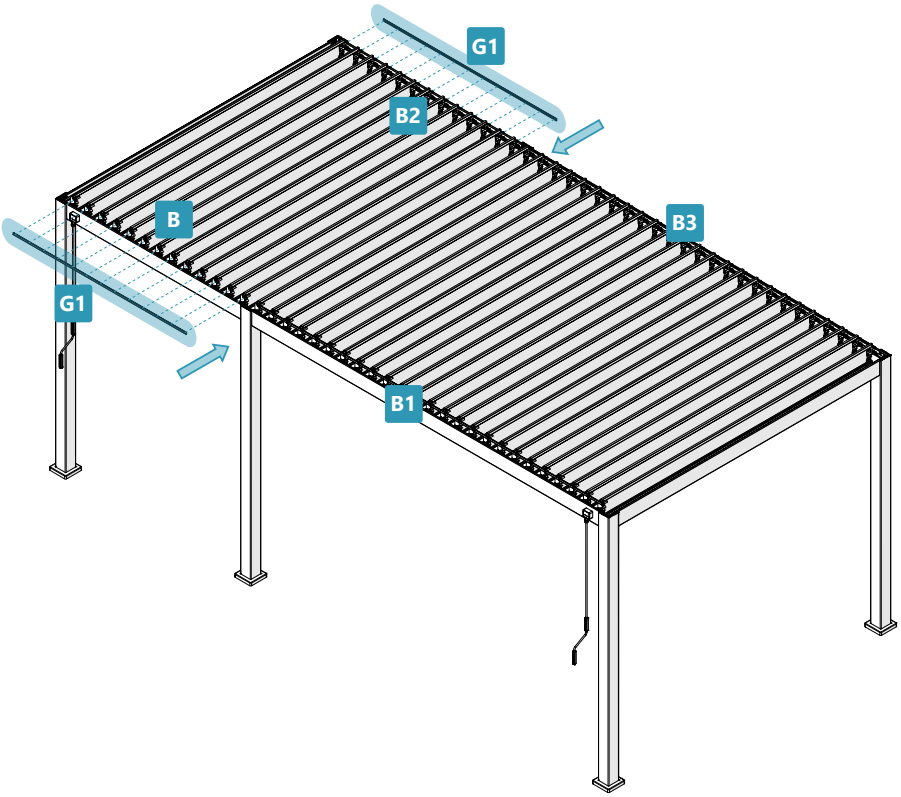


23

S x 76

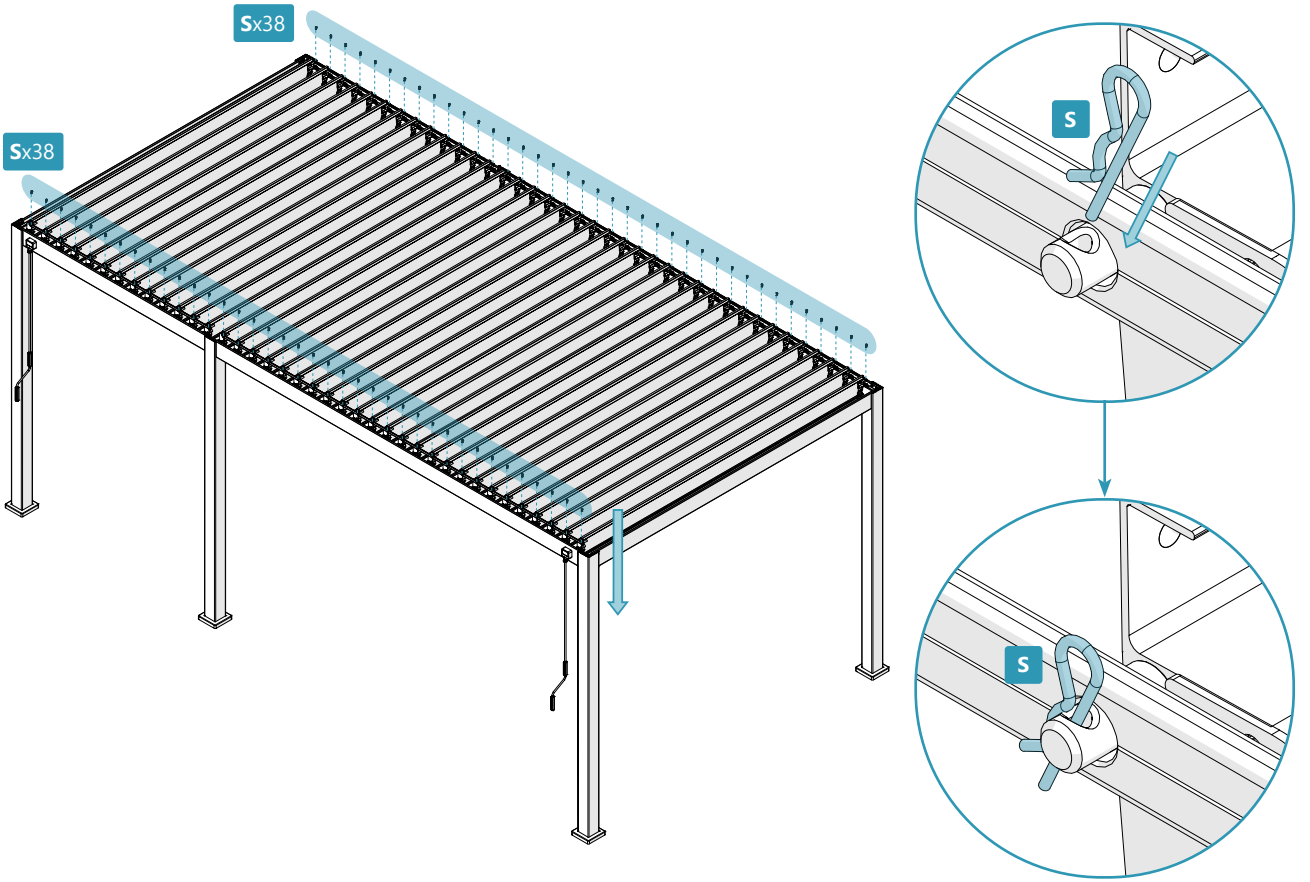



24


N x 3 N1 x 2 N2 x 1 R x 16

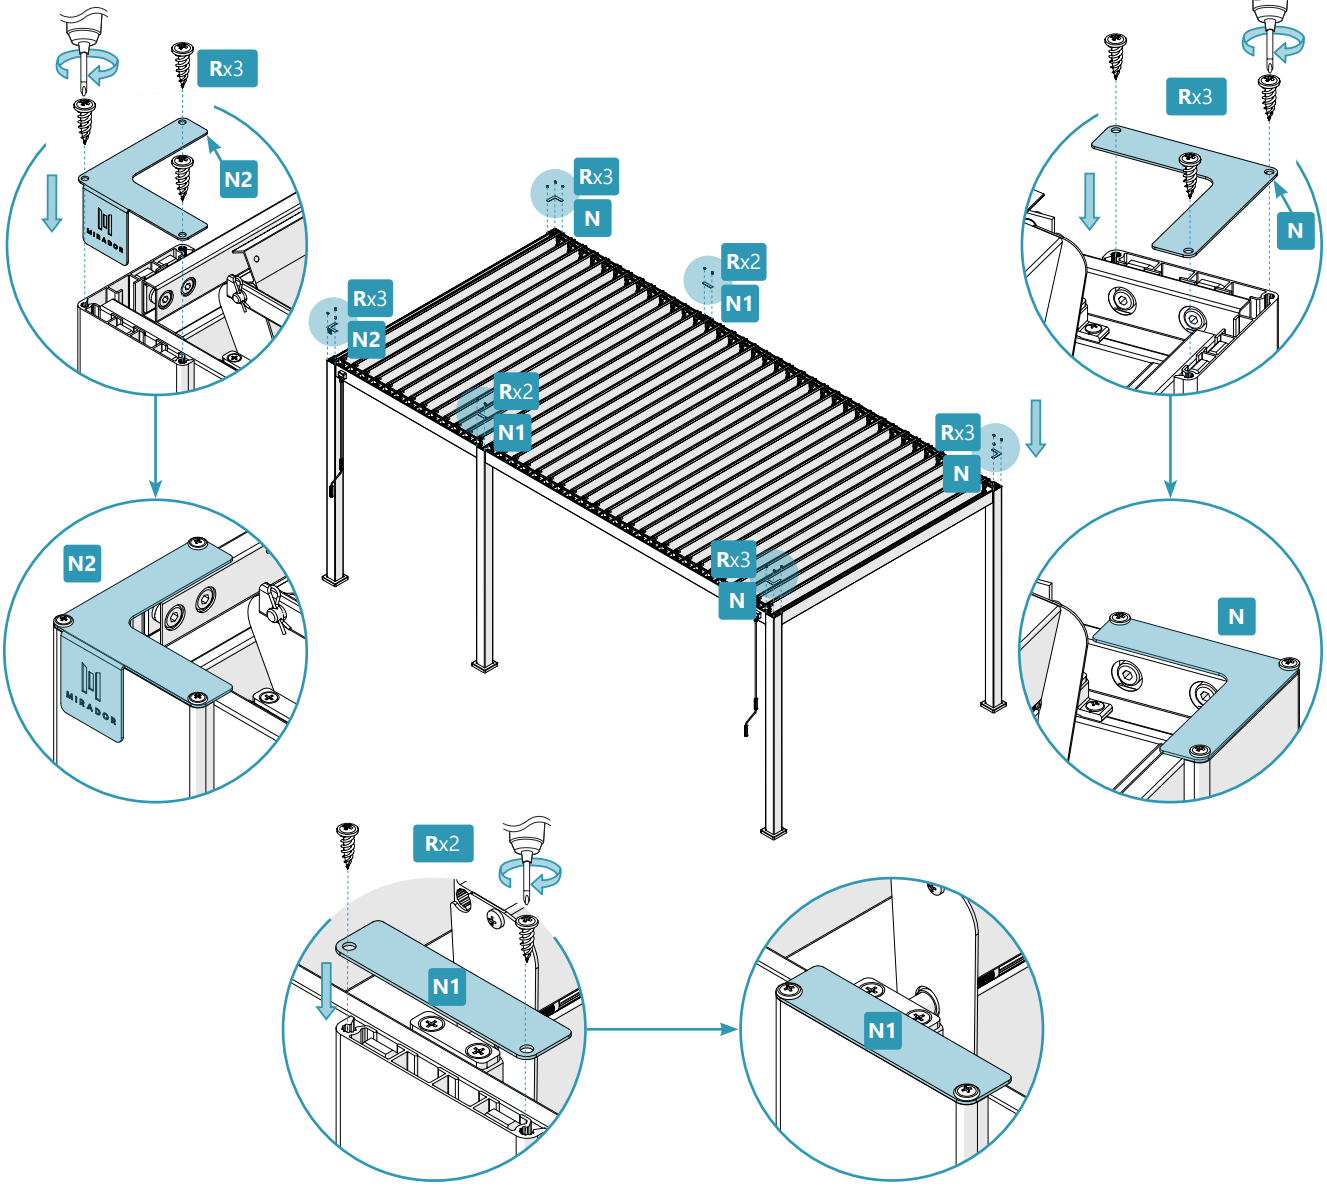

25

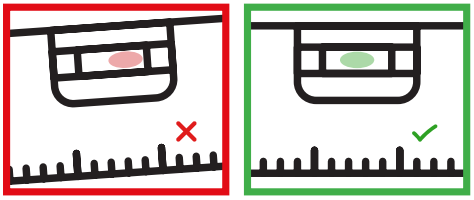


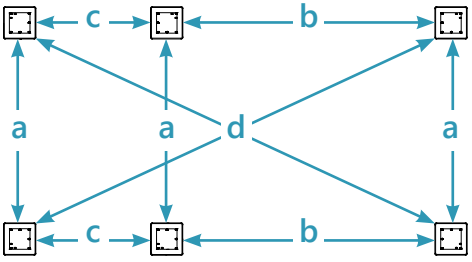

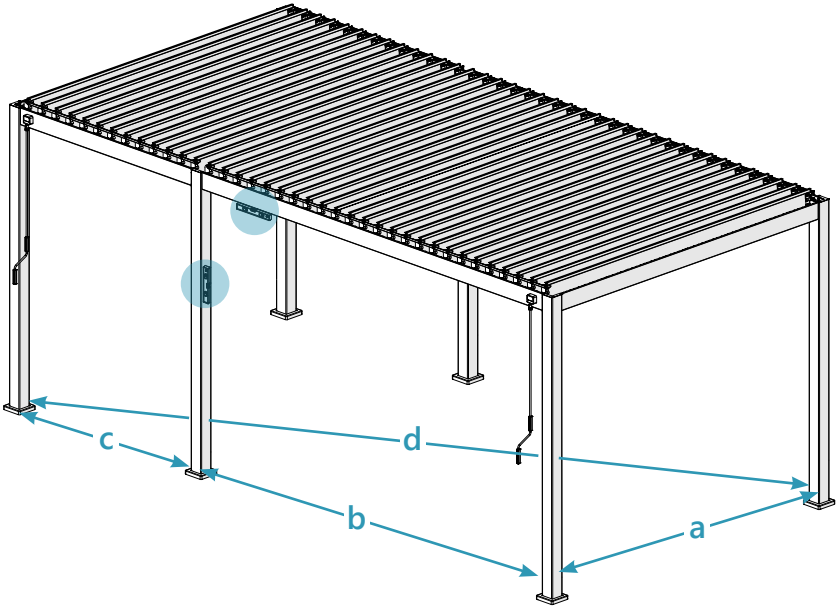

a = 2790.4mm / 109.9 in c = 1863.2mm / 73.4 in
b = 3705.1mm / 145.9 in d = 6343.2mm / 249.7 in

Warning:
If you do not adjust the main structure at this point, you may encounter problems when fitting accessories to the frame.

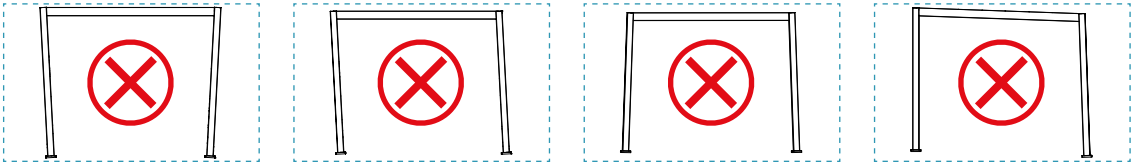


26


Z x 1



W x 24




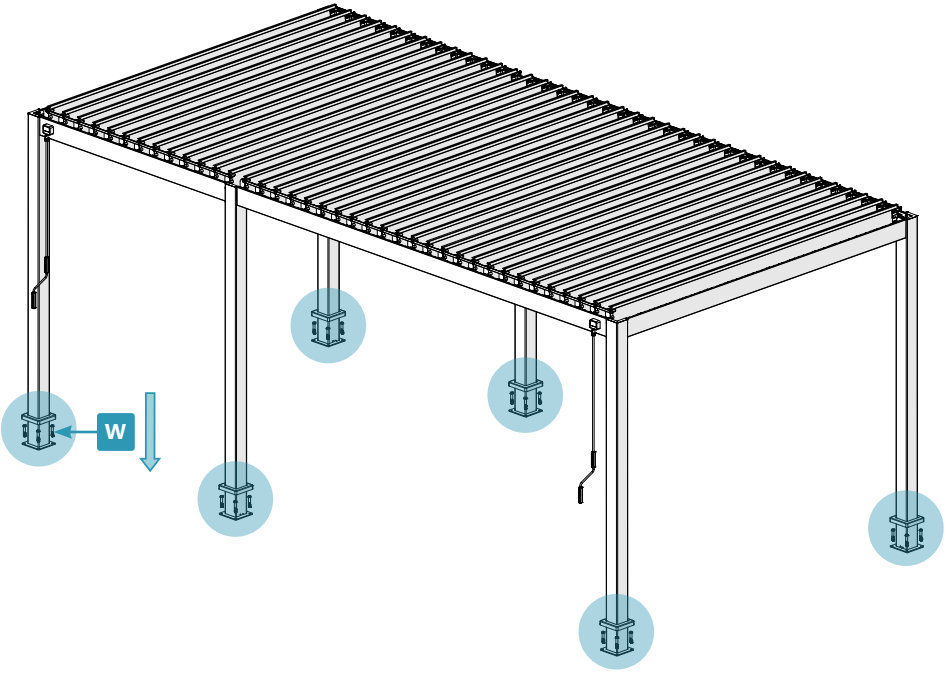


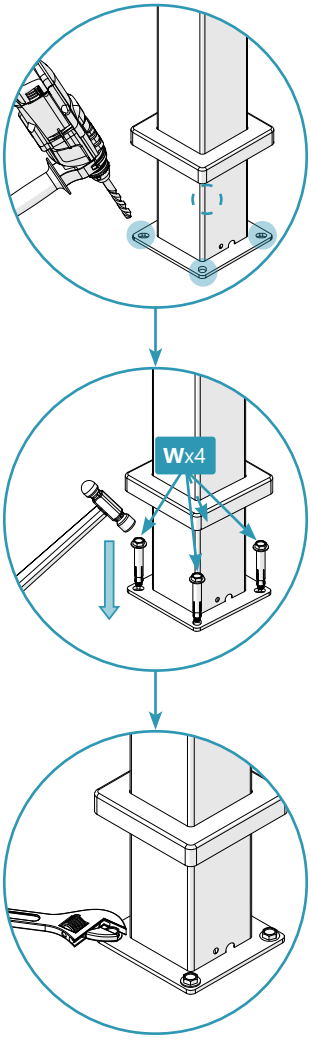


OPERATING YOUR PERGOLA


When opening/closing the louvers, please ensure the crank remains in a vertical position next to the pillar.
Do not move the crank too far away from the pillar.

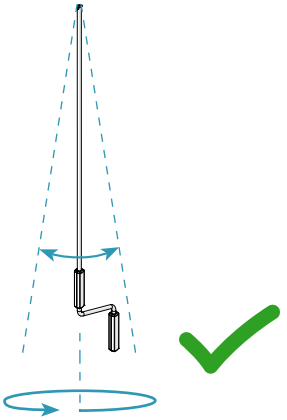

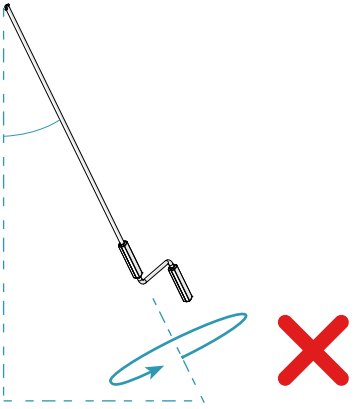

To open the louvers, turn the crank handle clockwise;
To close the louvers, turn the crank handle counter clockwise.

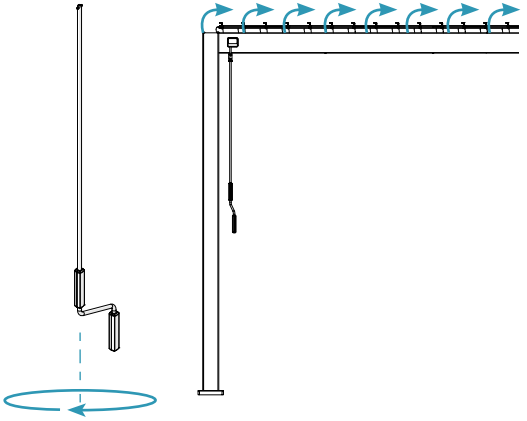

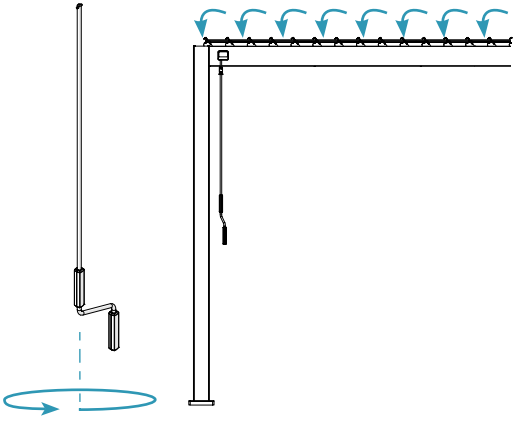

more to enjoy

FOLLOW US ON
WWW.MIRADOROUTDOOR.COM

@miradoroutdoor @MiradorOutdoor
@miradoroutdoor @miradoroutdoor

